Manualslib.com - The Global Manuals Library

SHARP 13N-M100B SERVICE MANUAL

Quick Links

Service Manual
Location of User's Control
Installation and Service Instructions
Chassis Layout
Block Diagram
Schematic Diagrams

Table of Contents

Table of Contents
service manual
sharp corporation
IMPORTANT SERVICE SAFETY PRECAUTION
safety notice
LOCATION OF USER'S CONTROL
INSTALLATION AND SERVICE INSTRUCTIONS
CHASSIS LAYOUT
BLOCK DIAGRAM
SCHEMATIC DIAGRAMS
PRINTED WIRING BOARD ASSEMBLIES
REPLACEMENT PARTS LIST
miscellaneous parts
crt unit
supplied accessories
packing parts
cabinet parts
PACKING OF THE SET
Other ManualsLib Projects

SHARP SERVICE MANUAL

SX0K513N-M100

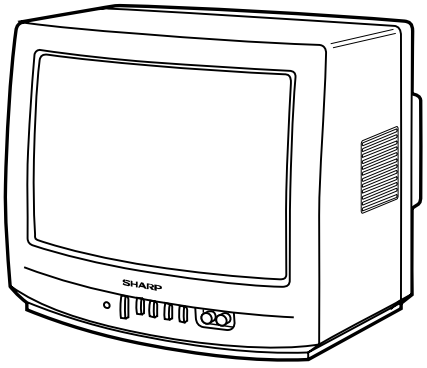

COLOR TELEVISION

Chassis No. SN-010

MODELS 13N-M100B/150B CN13M10B

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

Page

- ELECTRICAL SPECIFICATIONS 1
- IMPORTANT SERVICE SAFETY PRECAUTION 2
- LOCATION OF USER'S CONTROL 6
- INSTALLATION AND SERVICE INSTRUCTIONS 7
- CHASSIS LAYOUT 13
- BLOCK DIAGRAM 14
- SCHEMATIC DIAGRAMS 15
- PRINTED WIRING BOARD ASSEMBLIES 21
- REPLACEMENT PARTS LIST 24
- PACKING OF THE SET 31

ELECTRICAL SPECIFICATIONS

POWER INPUT ..... 120 V AC 60 Hz
POWER RATING ..... 53 W
PICTURE SIZE ..... 580cm^2 (89.8sq inch)
CONVERGENCE ..... Magnetic
SWEEP DEFLECTION ..... Magnetic
FOCUS ..... Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES
  Picture IF Carrier Frequency ..... 45.75 MHz
  Sound IF Carrier Frequency ..... 41.25 MHz
  Color Sub-Carrier Frequency ..... 42.17 MHz (Nominal)
AUDIO POWER
  OUTPUT RATING ..... 0.9W (at 10% distortion)
SPEAKER
  SIZE ..... 8 cm (Round)
  VOICE COIL IMPEDANCE ..... 32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE
  VHF/UHF ..... 75 ohm Unbalanced
TUNING RANGES
  VHF-Channels ..... 2 thru 13
  UHF-Channels ..... 14 thru 69
  CATV Channels ..... 1 thru 125
  (EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

IMPORTANT SERVICE SAFETY PRECAUTION

■ Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
   To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

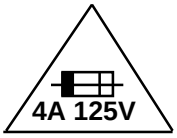

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 4A-125V FUSE.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
   It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
   The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
   Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators and etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.

- Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
- Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15µF capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.
  AII checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)
  Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

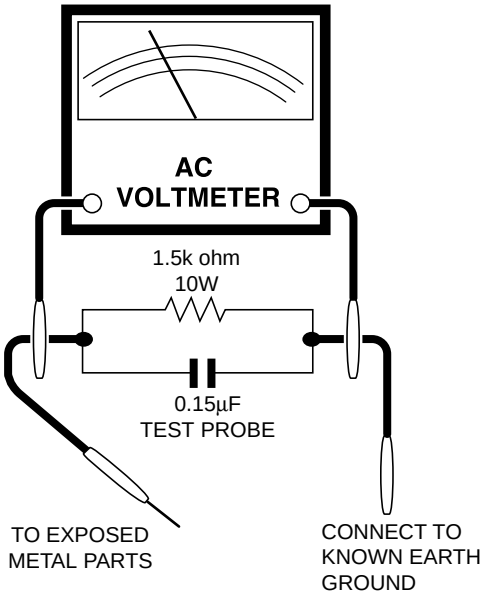

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.
Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

■ **Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.**

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le réceqteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC B+ basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

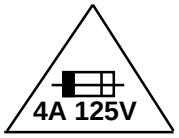

PRECAUTION: POUR LA PROTECTION CONTINUE CONTRE LES RISQUES D'INCENDIE, REMPLACER LE FUSIBLE PAR UN FUSIBLE DE MEME TYPE 4A-125V.

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce systéme, supprimer la charge statique en branchant une résistance de 10 kΩ en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anodel. (Le corden d'alimentation doit être retiré de la prise murale.)

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en porant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X.
   Le tube-image, seule source de rayons X dons les téleviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension".
   C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux préscrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée bout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
   Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

(Suite)

VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE

Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la facon suivante:

- Brancher le cordon d'alimentation directem-ent à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
- A l'aide de deux fils à pinces, brancher une résistance de 1,5 kΩ 10 watts en parallèle avec un condensateur de 0,15µF en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
- Utiliser un voltmètre CA d'une sensibilité d'au moins 5000Ω/V pour mesurer la chute de tension en travers de la résistance.
- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adpatation non polarisée peut être utilisée dans le but de terminer ces vérifications.)
  Tous les courants mesurés ne doivent pas dépasser 0,5 mA.
  Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

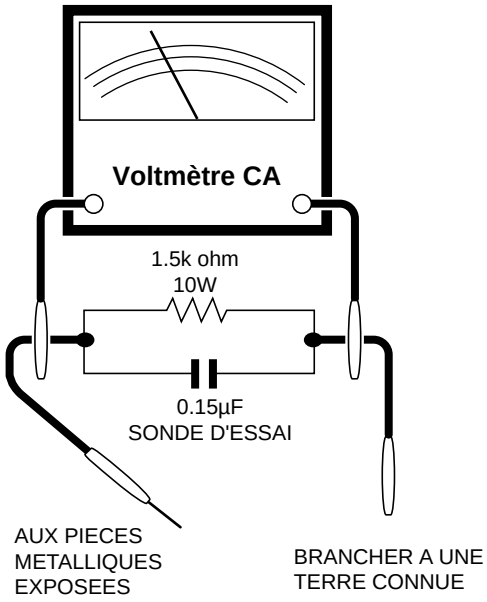

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.
Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont identifiées par la marque " ⚠ " et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.
Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL

Front Panel

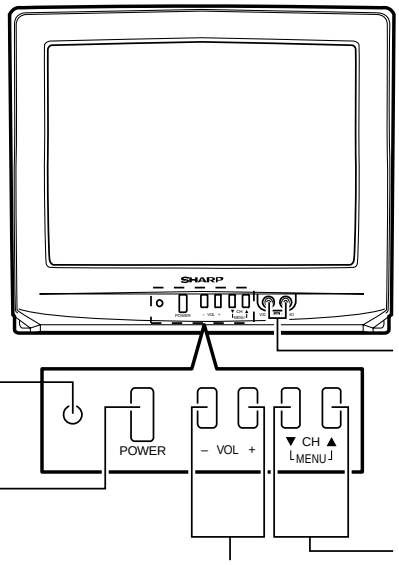

VIDEO/AUDIO IN TERMINALS

SENSOR AREA FOR REMOTE CONTROL

POWER
Press → On.
Press again → Off.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

CHANNEL UP/DOWN – MENU
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Press both at the same time to access the MAIN MENU screen.

Basic Remote Control Functions

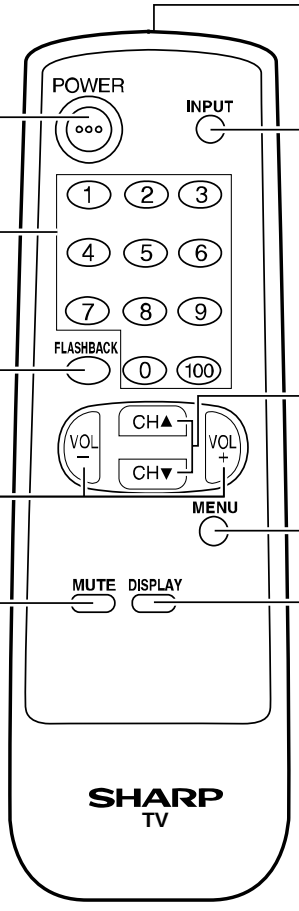

Infrared Transmitter Window

POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

INPUT
Press → Switch to external video input mode.
Press again → Switch to TV mode.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the " ⬍ " mark of the MENU screen.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INSTALLATION AND SERVICE INSTRUCTIONS

Note: (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
(2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads 21.1 ±1.5V.
5. Apply external 27.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S03" and Bus data "01" (Y-mute on).
4. The voltage should be approximately, 24.0kV (at zero beam).
   If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjusment is required.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.
Now, the TV set is switched on and enters the service mode.
To exit the service mode, turn the television off by pressing the power button.

1. Service mode.

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer control are in their proper (reset) position.

2. Service number selection.

In the service mode, you will see the window screen as window ①. There are 3 adjustment categories ②DEF, ③SIGNAL, ④FIX VALUE as show in **Figure A**.

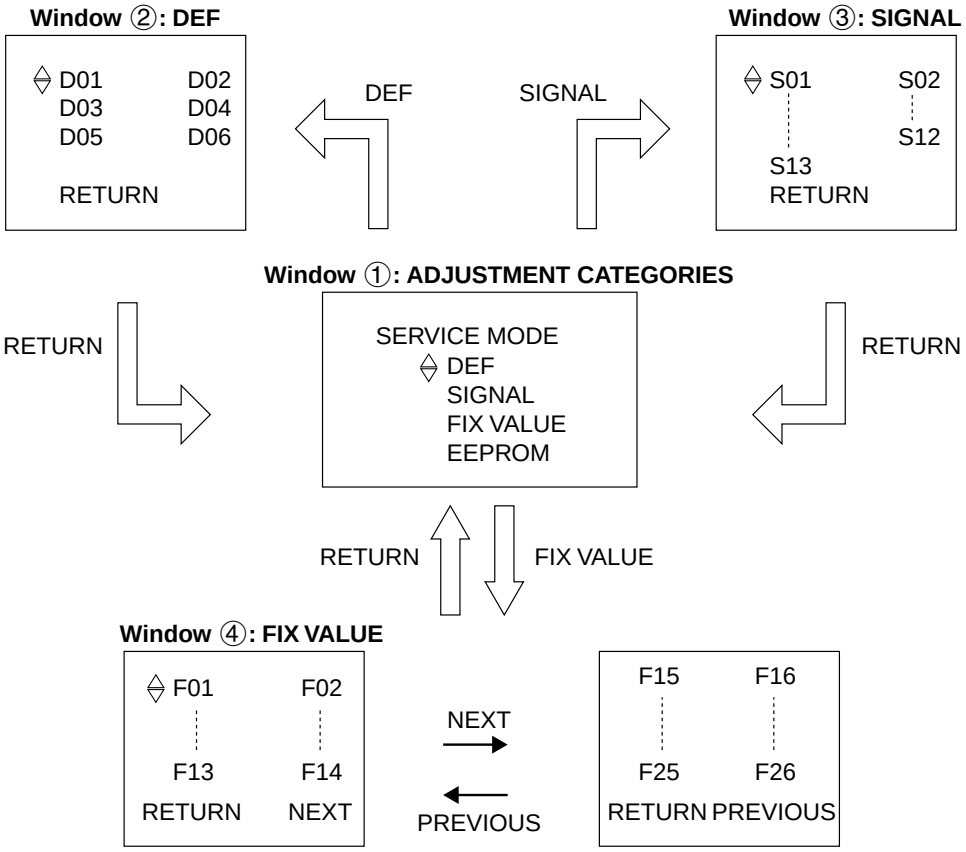

Figure A: ADJUSTMENT CATEGORIES

Press CH UP/DOWN button for selection and enter by VOL UP or VOL DOWN.
Press CH UP/DOWN button to select the adjustment item and VOL UP/DOWN to adjust the data number for each categories.
(OSD disturbance can be erased by R/C display key)
(Note: EEPROM-factory used only)

Below are the adjustments ranges and initial values for FIX VALUE category.

FIX VALUE

SERVICE POSITION	ADJUST ITEM	DATA		
		RANGE	INITIAL VALUE	(Hex)
F01	OPTION 1	00-FF	B0	*
F02	OPTION 2	00-FF	04	04
F03	E-SAVE	00-3F	23	2A
F04	TUNER SETUP	00, 01	00	00
F05	R-TONE RD	00-7F	19	03
F06	R-TONE BD	00-7F	00	7C
F07	B-TONE RD	00-7F	00	00
F08	B-TONE BD	00-7F	12	04
F09	FM LEVEL	00-1F	0C	0C
F10	AFC GAIN	00, 01	00	00
F11	G DRIVE	00, 0F	00	0F
F12	FBT BLK SW	00,01	01	01
F13	V COMP	00-07	07	07
F14	OSD CONT	00-03	02	01
F15	SHARPNESS	00-3F	19	19
F16	FLT SYS	00-07	00	00
F17	KILLER OP	00-07	04	02
F18	PRE SHOOT	00-03	03	00
F19	CORING	00-03	04	04
F20	DC REST	00-03	02	02
F21	BS START	00-03	01	01
F22	BS GAIN	00-03	01	01
F23	ABL START	00-07	00	00
F24	R/B ANGLE	00-0F	08	08
F25	H BLK R	00-0F	04	03
F26	H BLK L	00-0F	04	06

* Must be "B0" for 13N-M100B/150B, "A0" for CN13M10B

Table - A

Below are the ranges and initial values for each adjustment and in each categories.

DEF

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
D01	H-PHASE	00-1F	0C	
D02	V-SIZE	00-7F	40	
D03	V-POSITION	00-3F	20	Must be "20"
D04	CC-POSITION	00-FF	1A	
D05	V-LINEARITY	00-1F	10	Must be "12"
D06	V-S-CORRECTION	00-1F	10	Must be "0F"

Table - B

SIGNAL

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
S01	RF AGC	00-3F	14	
S02	VIDEO LEVEL	00-07	03	
S03	Y-MUTE	00-03	00	"01": Y-MUTE, "02": V-STOP & Y-MUTE "03": Activate color killer circuit.
S04	SUB BIAS	00-FF	40	Must be "60"
S05	R-BIAS	00-FF	00	
S06	G-BIAS	00-FF	00	
S07	B-BIAS	00-7F	00	
S08	R-DRIVE	00-7F	40	
S09	B-DRIVE	00-7F	40	
S10	CONTRAST	00-7F	5A	
S11	TINT	00-7F	40	
S12	COLOR	00-7F	40	
S13	BRIGHTNESS	00-7F	40	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - C

Holding down both the Vol-up/Ch-down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2101.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2101	X		Holding down both the Vol-up/Ch-down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2101.
CRT	X		Adjust items related to picture tube only.

Table - D

■ SERVICE ADJUSTMENT

Note: Before making the service adjustment, make the bus data settings.

+B Adjustment

1. Receive a good local channel.
2. Select VIDEO ADJUSTMENT RESET on the menu to get the video reset.
3. Connect a DC voltmeter between the +B line (at SW transformer) of R611 and the ground terminal.
4. Adjust R738 so that the voltmeter should read 130±0.5V.

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S01".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.
   Note: You have to exit the service mode first to select another channel.

Video Level (TV Det Video Level) Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S02".
3. Set the data value to "02" first, then adjust the data in ranges 02 ±2 step to obtain a normal contrast level.

Screen adjustment

1. Connect to oscilloscope probe between TP855 and ground of the CRT unit.
2. Receive a good local channel.
3. Enter the service mode Signal category and set the service adjustment "S04" to step 60. Then select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum level. (record the original data first). You may skip this step, if you selected a B/W picture or monoscope pattern. Set also the "S05/S06/S07" data to minimum level.
4. Select the service adjustment "S03" and set the data value to "01" to turn off the luminance signal (Y-mute).
5. Select the service adjustment "S13" and adjust the data value to obtain 2.40 volts as shown in **Figure B**.

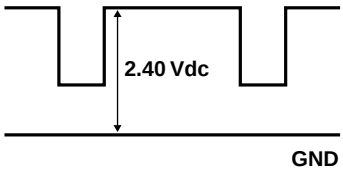

Figure B: WAVEFORM FOR SCREEN ADJUSTMENT

6. Adjust the master screen control untill the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustment "S05" red, "S06" green, "S07" blue to obtain a good grey scale with normal white at low brightness level.
8. Select the service a adjustment "S03" and reset data to "00". Select the service adjustment "S12" and reset data to obtain normal color level.
9. Remove probe and reset the master screen control to obtain normal brightness range.

White Balance Adjustment.

1. Receive a good local channel.
2. Select the service adjustment "S12" and set the data value to "00" to set the color level to the minimun. You may skip this step, if you selected a B/W picture or monoscope.
3. Alternately adjust the service adjustment data of "S08" and "S09" untill a good grey scale with normal white is obtained.
4. Select the service adjustment "S12" and reset data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set the customer tint control to the center of it's range.
3. Enter the service mode and select the service adjustment "S11".
4. Adjust "S11" data value to obtain normal fresh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position.
3. Enter the service mode and select the service adjustment "S12".
4. Adjust "S12" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S13".
4. Adjust "S13" data value to obtain normal brightness level.

Vertical-Size, V-Linearity, V-S Correction Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D02" for Vertical Size, "D05" for V-Linearity and "D06" for V-S Correction Adjustment.
3. Set in order "D05" for V-Linearity, "D06" for V-S Correction and set the data to get the best linearity.
4. Then adjust "D02" data unitll it become a proper vertical size.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D01".
3. Adjust "D01" data value to center the picture.

Vertical-Phase Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D03".
3. Adjust "D03" bus data to get the most acceptable vertical position.
   Note: The step range is 20 ±10.

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D04".
3. A black text box will appear on the screen. (see **Figure C**. below)
4. Adjust "D04" data value to balance the text box position in the center. (A=B).

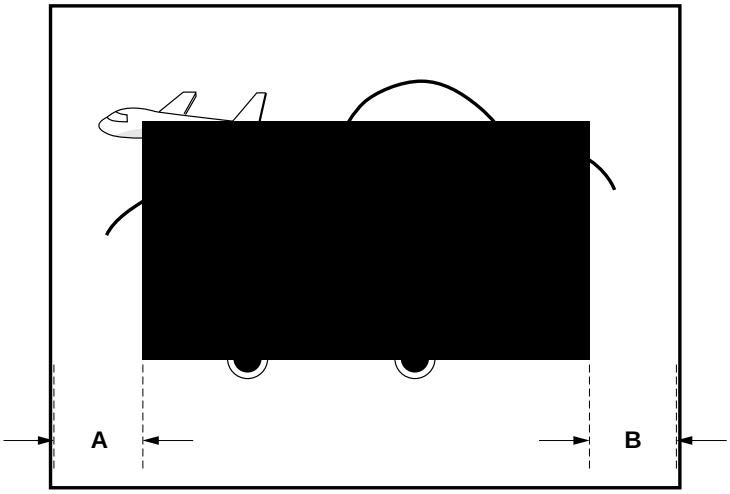

Figure C.

CHASSIS LAYOUT

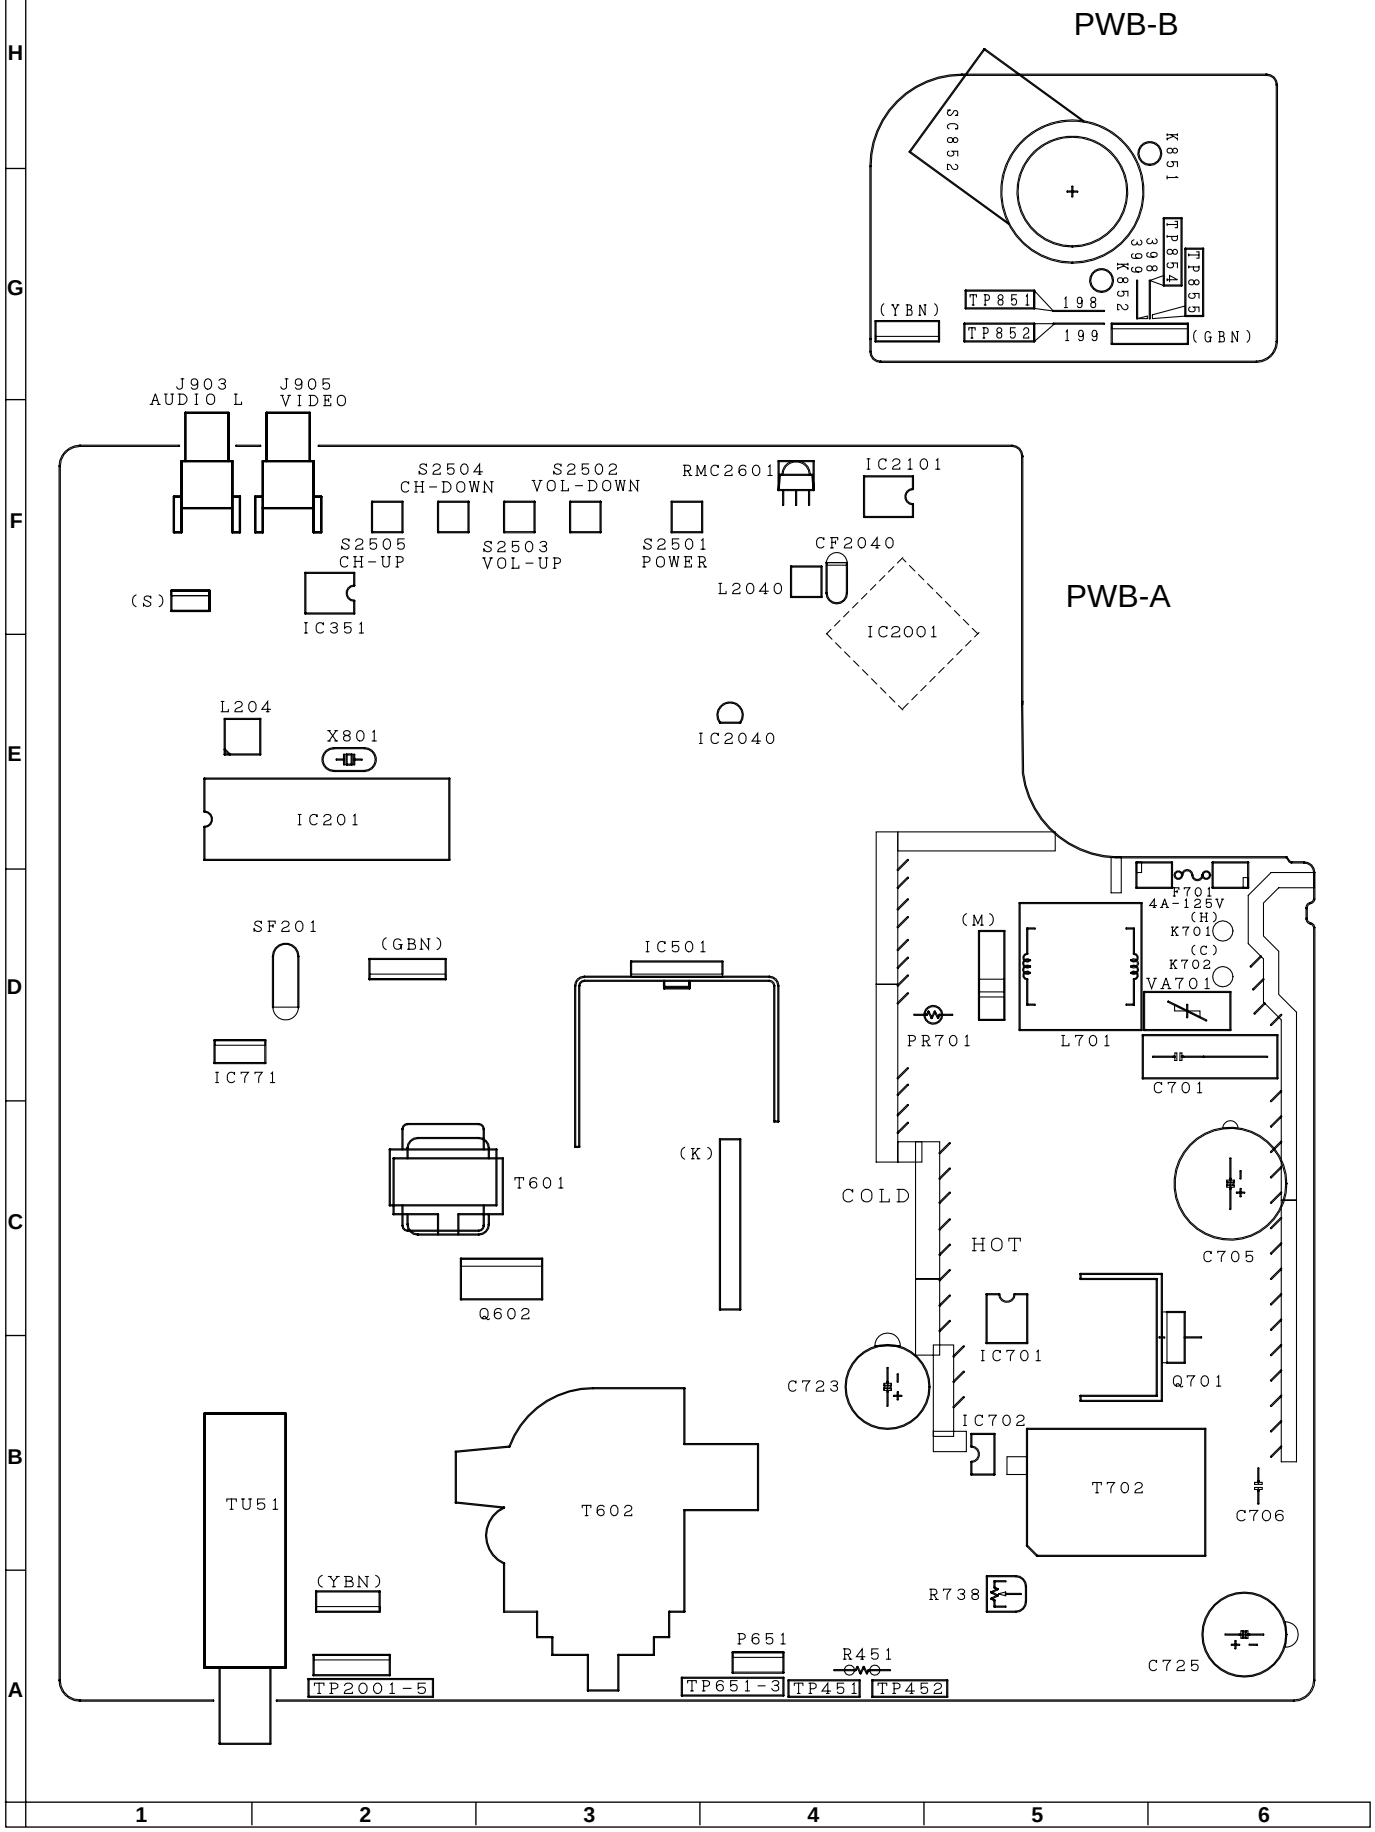

BLOCK DIAGRAM

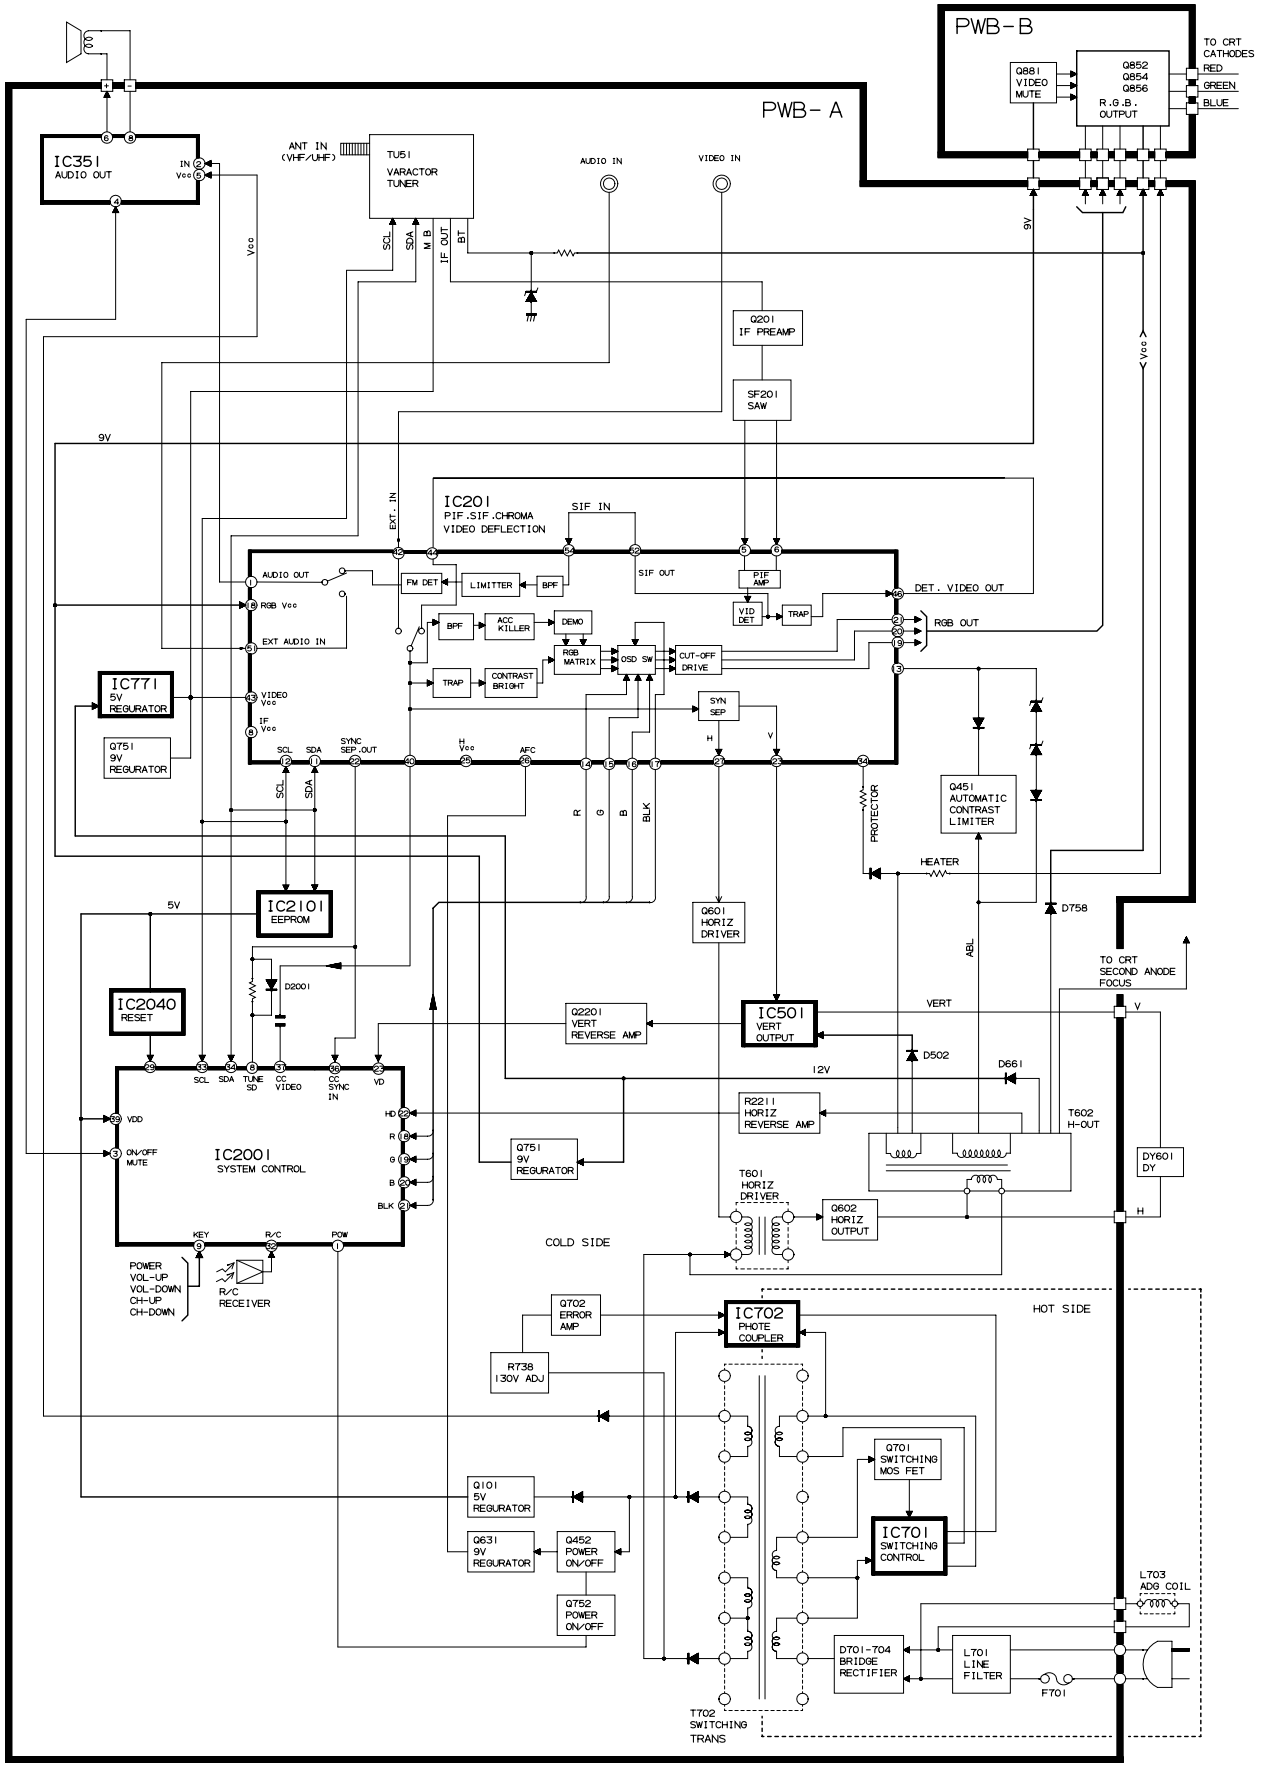

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. *The unit of resistance "ohm" is omitted. (K=kΩ=1000Ω, M=MΩ)*
2. *All resistors are 1/10 watt, unless otherwise noted.*
3. *All capacitors are μ F, unless otherwise noted. (P=pF=μμF)*
4. *(G) indicates ±2% tolerance may be used.*
5. *⏚ indicates line isolated ground.*

VOLTAGE MEASUREMENT CONDITIONS:

1. *All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.*
2. *All voltages measured with 1000μ V B & W or Color signal.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.*
2. *◯▶ indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)*

⚠ AND SHADED ( ) COMPONENTS = SAFETY RELATED PARTS.
▲ MARK= X-RAY RELATED PARTS.

DRGANNES MARQUES ⚠ ET HACHRES ( ): PIECES RELATIVES A LA SECURITE.
MARQUE ▲ : PIECS RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVEFORMS

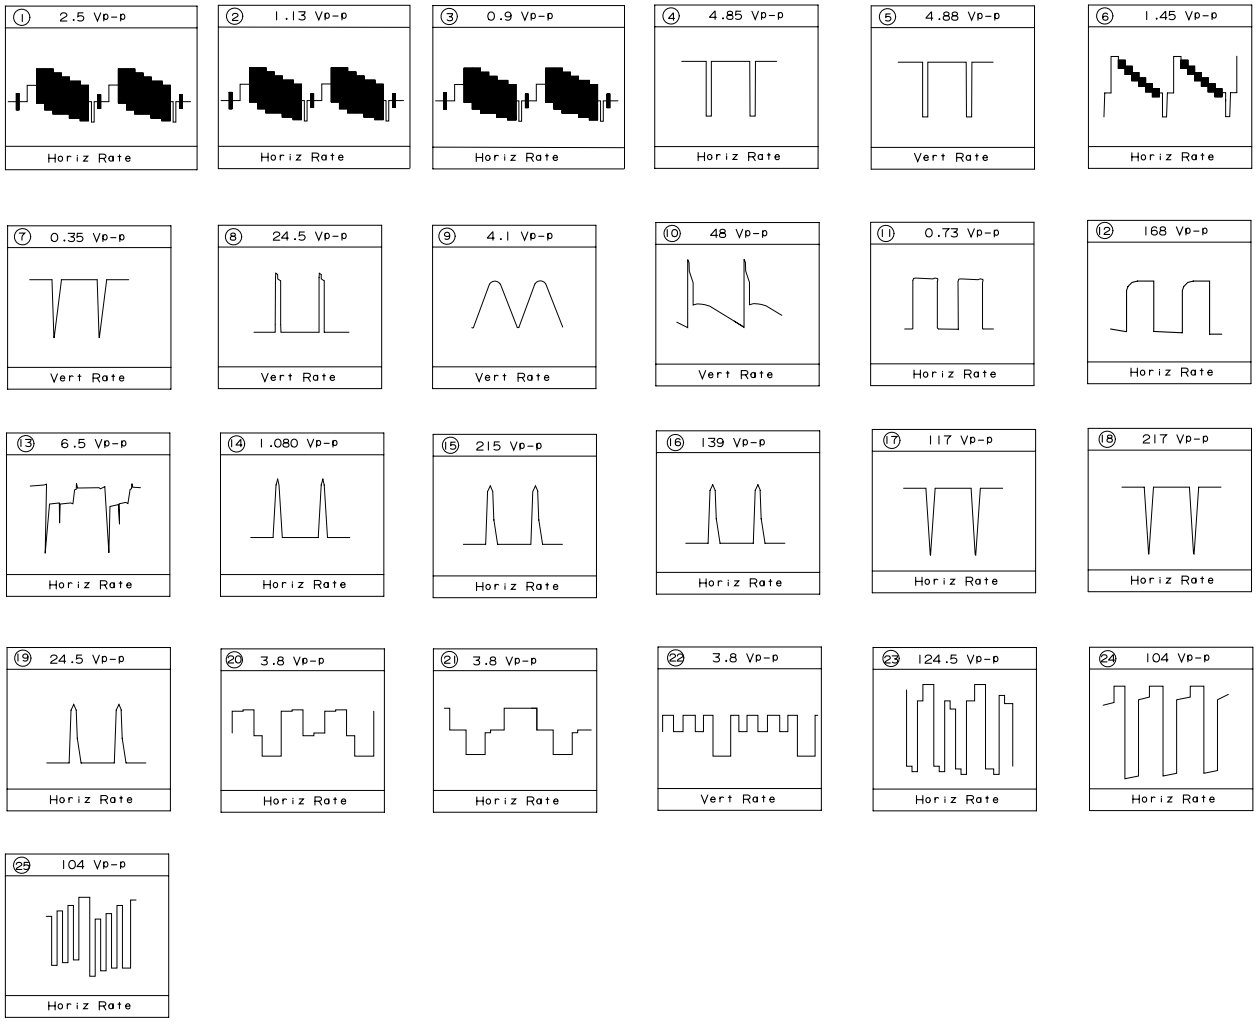

MODELS 13N-M100B/150B SCHEMATIC DIAGRAM: MAIN Unit

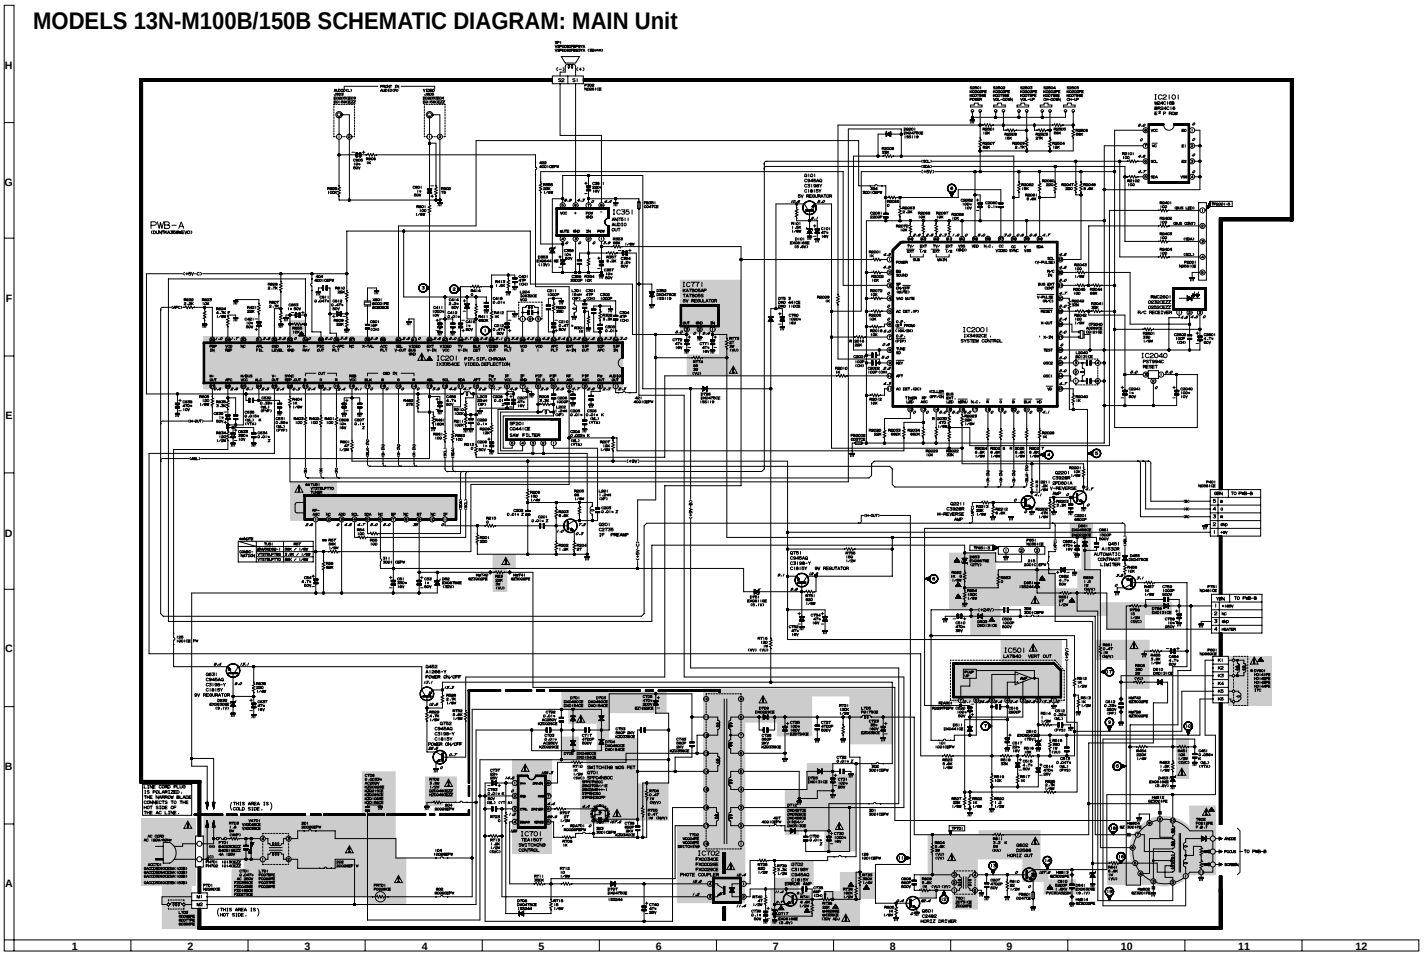

16 17

MODEL CN13M10B SCHEMATIC DIAGRAM: MAIN Unit

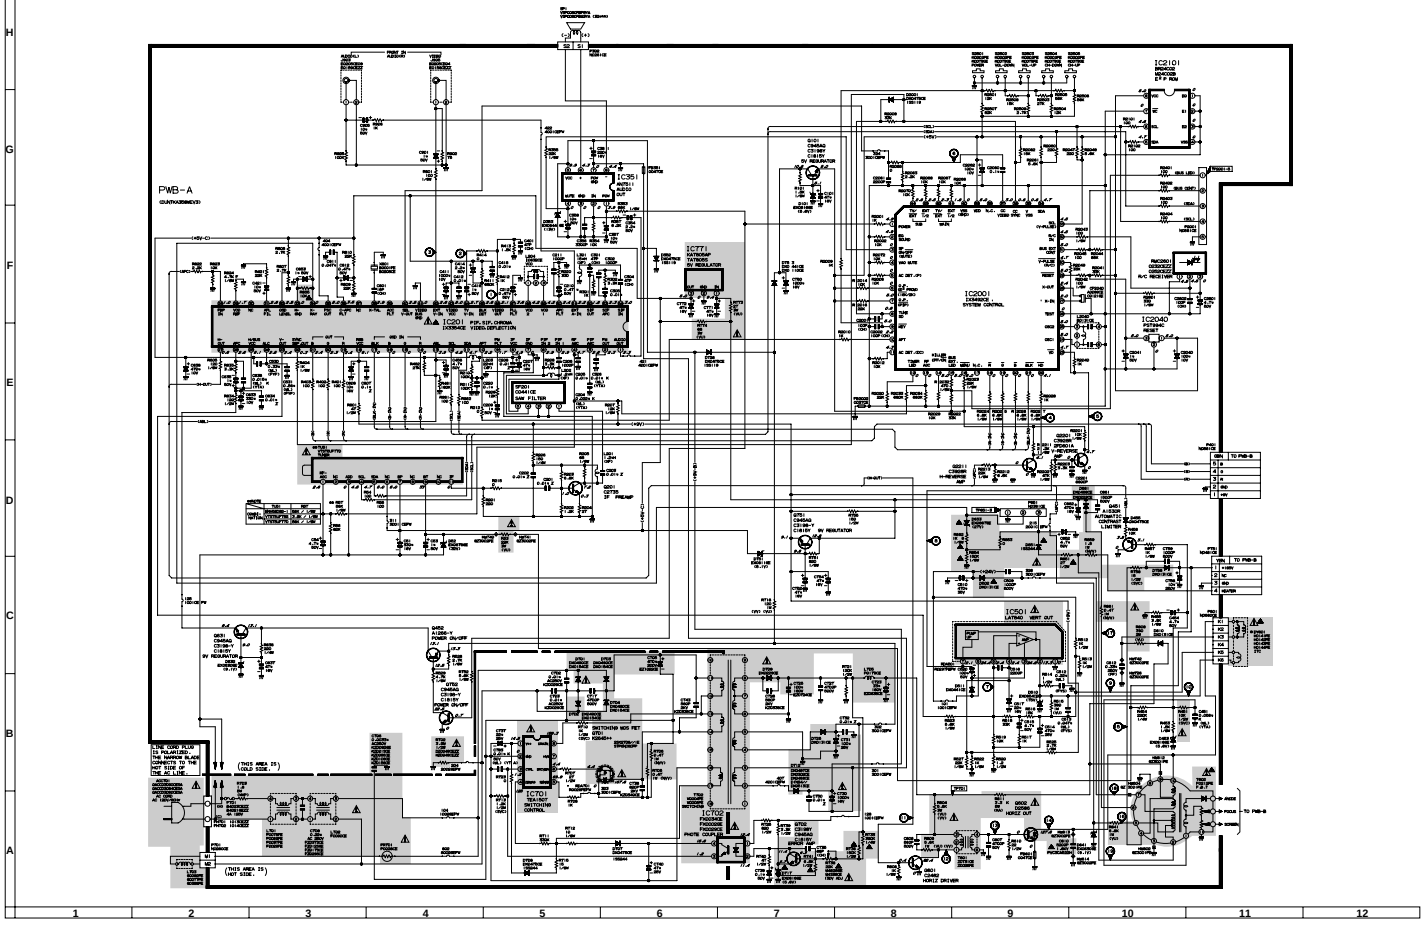

SCHEMATIC DIAGRAM: CRT Unit

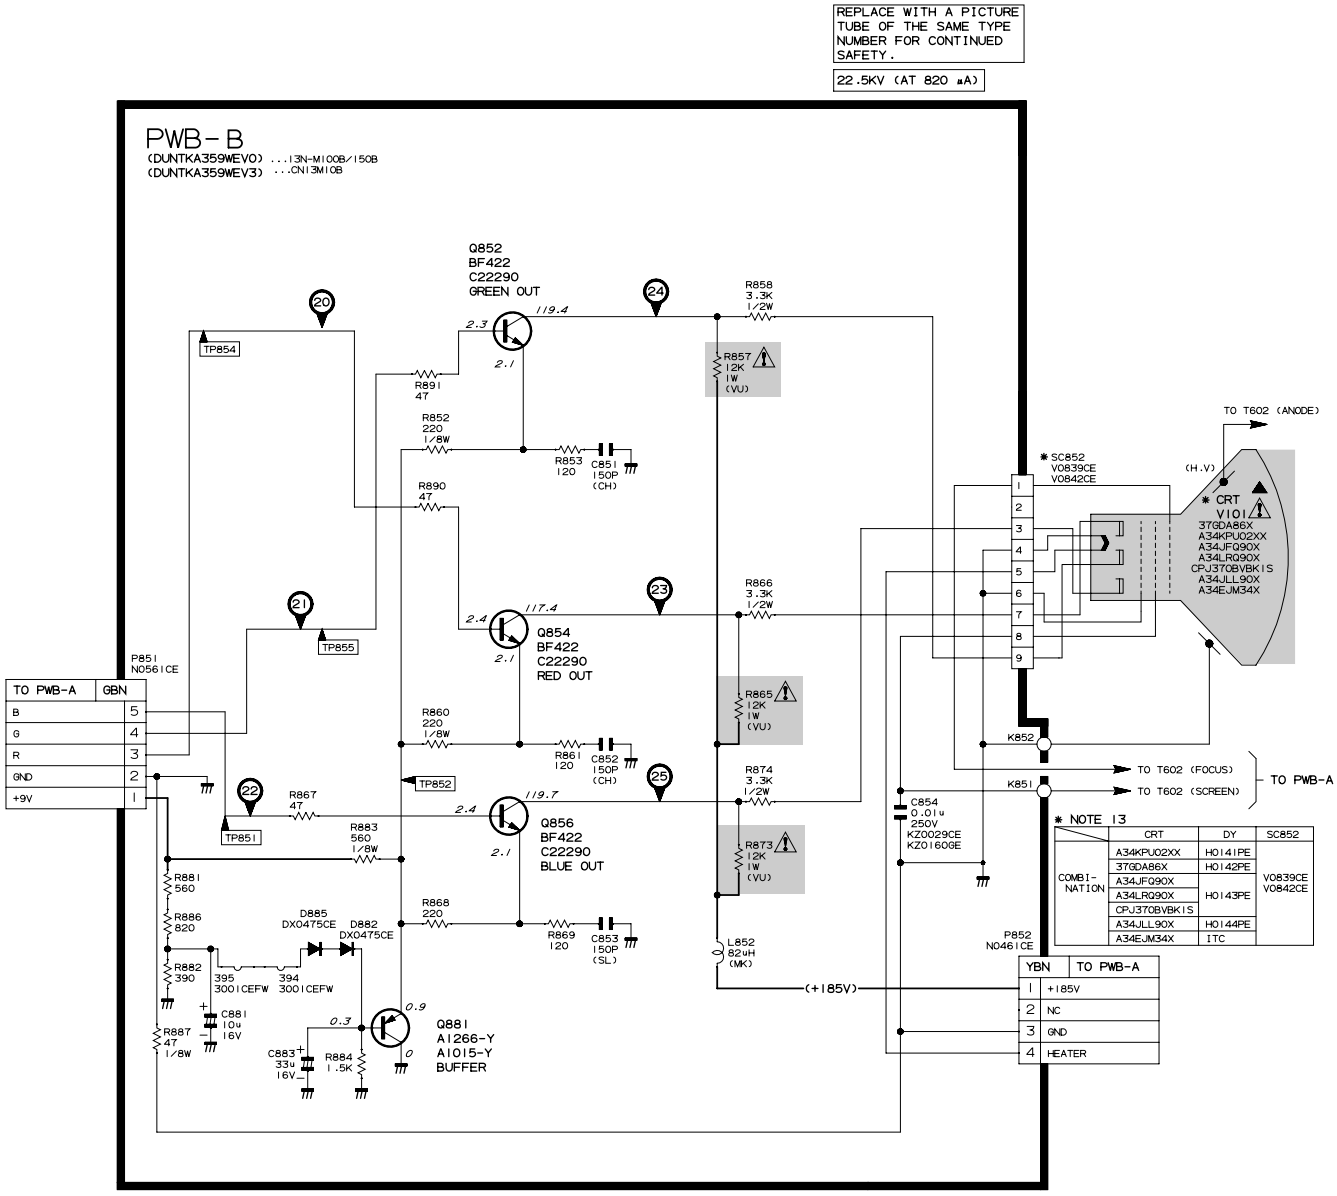

PRINTED WIRING BOARD ASSEMBLIES

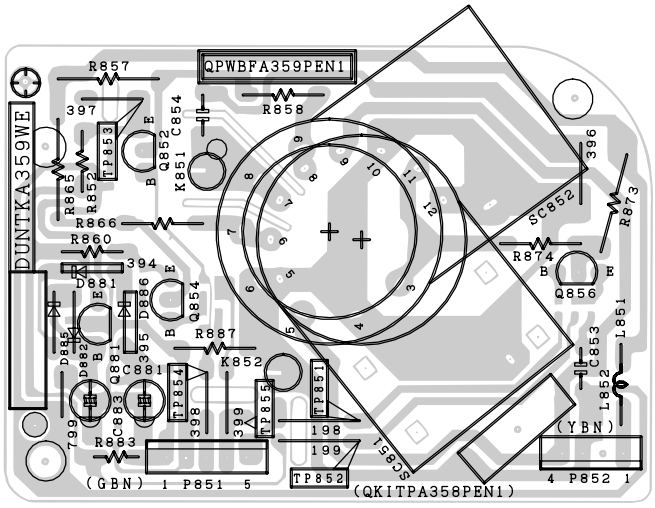

PWB-B: CRT Unit (Wiring Side)

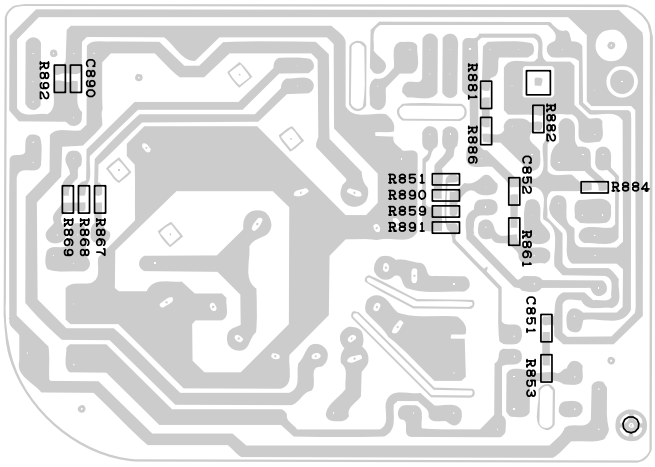

PWB-B: CRT Unit (Chip Parts Side)

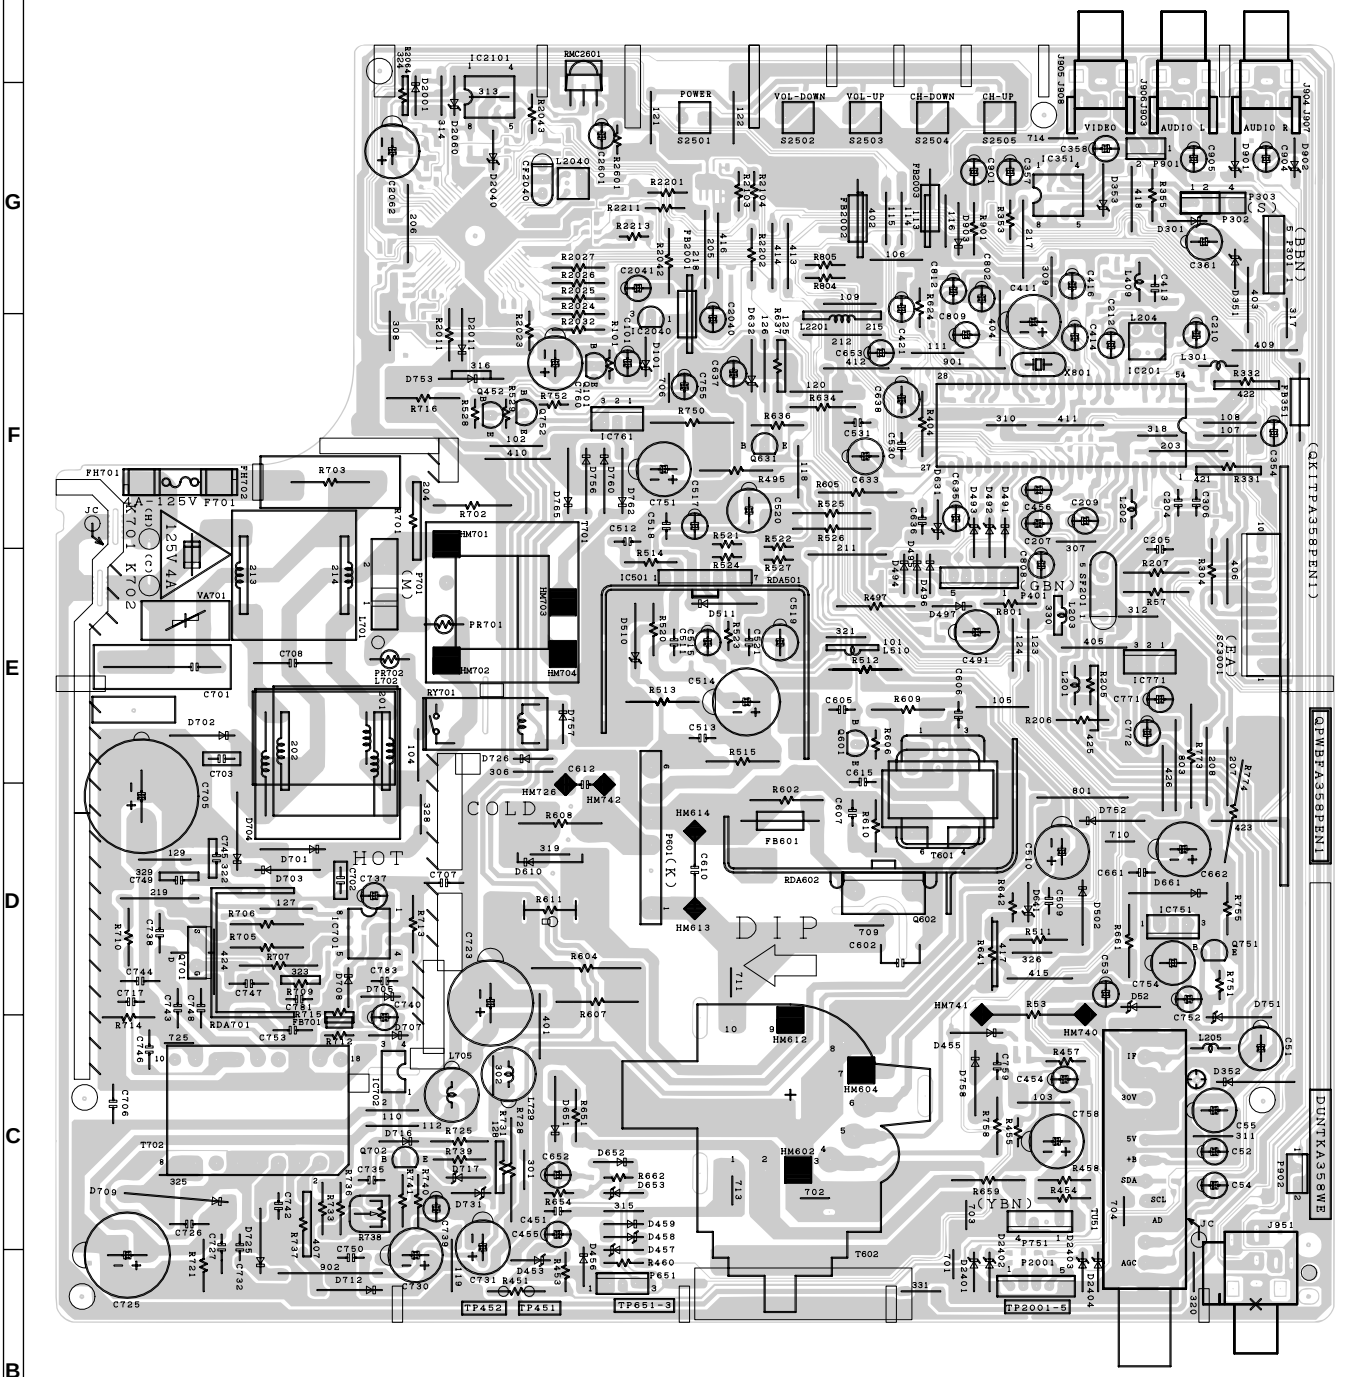

PWB-A: MAIN Unit (Wiring Side)

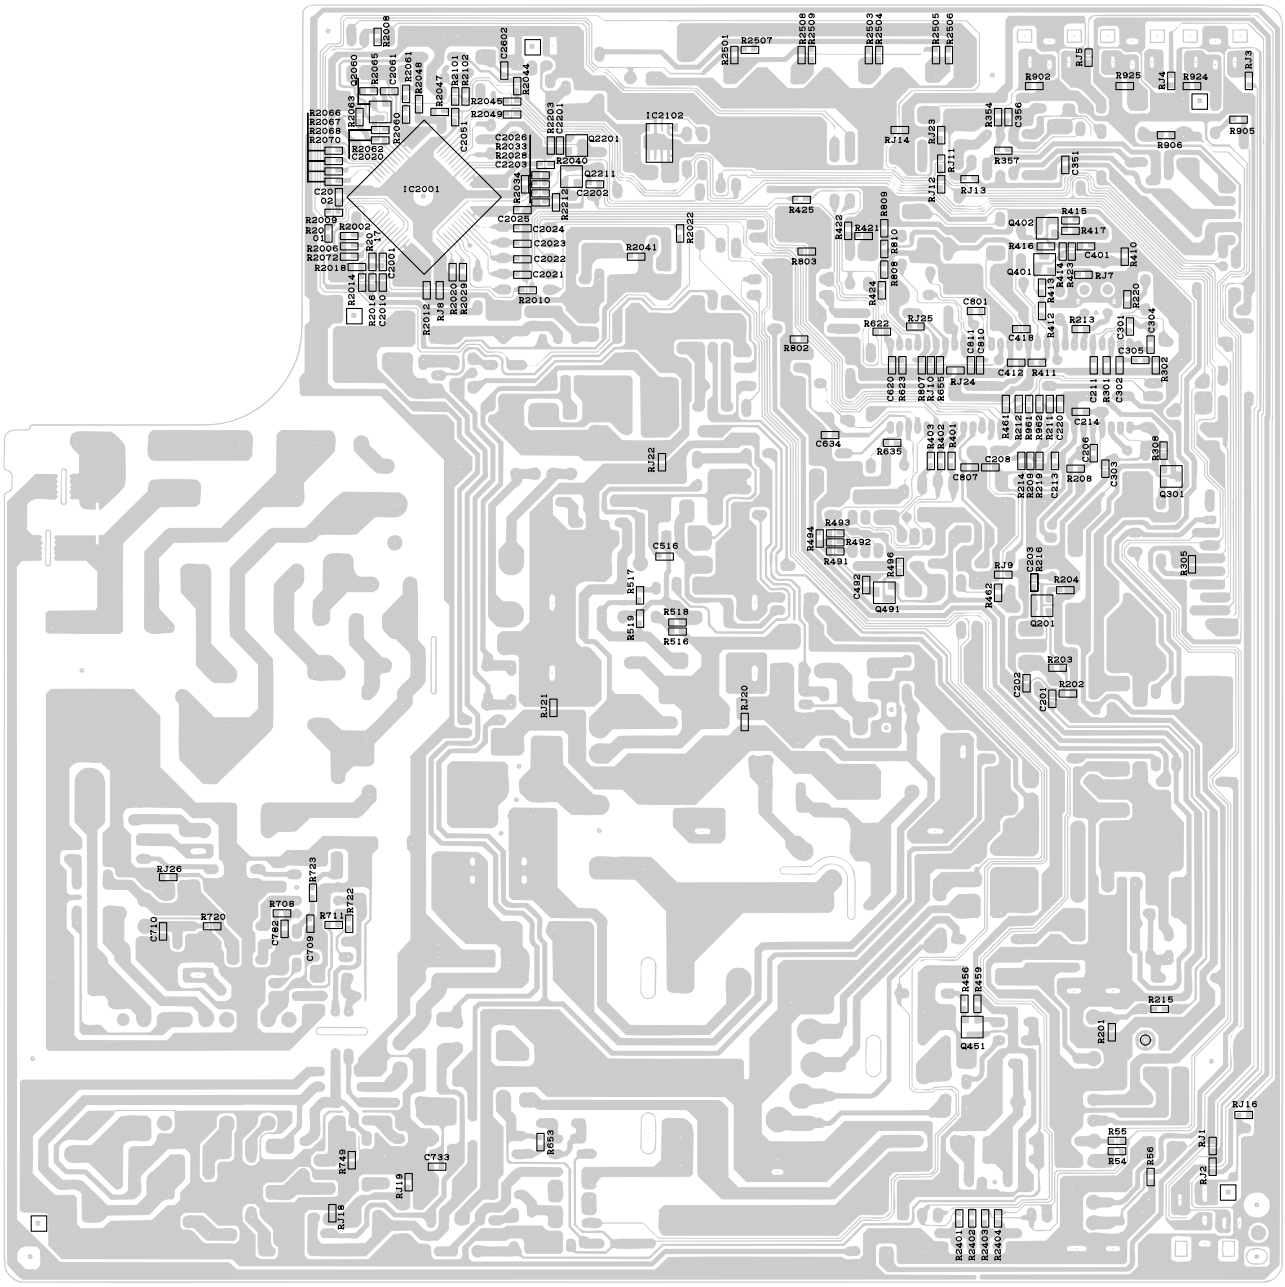

PWB-A: MAIN Unit (Chip Parts Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which dose no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

in **USA**: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X- RAY RELATED PARTS

LISTE DES PIECES

CHANGE DES PIECES

Les pi`eces de rechange qui pr élelesentent ces caract éleristiques sp éleciales de s élecurit éle, sont identifi élees dans ce manuel : les pi`eces élelectriques qui pr élesentent ces particularit éles, sont rep éler élee par la marque ⚠ et sont hachur élees dans les listes de pi`eces et dans les diagrammes sch élematiques.
La substitution d'une pi`ece de rechange par une autre qui ne pr éLesente pas les m éoemes caract éLeristiques de s élecurit éle que la pi`ece recommand élee parl'usine et dans ce manuel de service, peut provoquer une éLelectrocution, un incendie ou toutautre sinistre.

"COMMENT COMMANDER LES PIECES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

1. NUMERO DU MODELE
2. NO. DE REF
3. NO. DE PIECE
4. DESCRIPTION

in **CANADA**: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100

★MARQUE: SECTION LIVRAISON DES PIECES DE RECHANGE

▲ MARQUE: PIECES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code

PICTURE TUBE

▲⚠ V101	VB37GDA86X/1E	R	CRT (DY601: H0142PE)	CB
	or			
	VB34KPU02X/*S		CRT (DY601: H0141PE)	
	or			
	VB34JFQ90X/*S		CRT (DY601: H0143PE)	
	or			
	VB34LRQ90X/*S		CRT (DY601: H0143PE)	
	or			
	VB370BVBK1S-S		CRT (DY601: H0143PE)	
	or			
	VB34JLL90X/*S		CRT (DY601: H0144PE)	
	or			
	VB34EJM34X/1E		CRT (I.T.C.)	
▲⚠ DY601	RCiLH0142PEZZ	R	DY (CRT: 37GDA86X)	AZ
	or			
	RCiLH0141PEZZ		DY (CRT: A34KPU02XX)	
	or			
	RCiLH0143PEZZ		DY (CRT: CPJ370BVBK1S	
	or		or A34JFQ90X	
			or A34LRQ90X)	
	RCiLH0144PEZZ		DY (CRT: A34JLL90X)	

	CRT	DY	SC852
COMBI-NATION	A34KPU02XX	H0141PE	V0839CE V0842CE
	37GDA86X	H0142PE	
	A34JFQ90X	H0143PE	
	A34LRQ90X		
	CPJ370BVBK1S		
	A34JLL90X	H0144PE	
	A34EJM34X	ITC	

⚠ L703	RCiLG0092PEZZ	R	Degaussing Coil	AK
	or			
	RCiLG0077PEZZ			
	or			
	RCiLG0386PEZZ			
	PMAGF3045CEZZ	R	Purity Magnet	AG
	QEARC1436PEZZ	R	Grounding Strap	AE

PRINTED WIRING BOARD ASSEMBLIES
(NOT REPLACEMENT ITEM)

PWB-A	DUNTKA358WEV0	–	MAIN Unit (13N-M100B/150B)	—
PWB-A	DUNTKA358WEV3	–	MAIN Unit (CN13M10B)	—
PWB-B	DUNTKA359WEV0	–	CRT Unit (13N-M100B/150B)	—
PWB-B	DUNTKA359WEV3	–	CRT Unit (CN13M10B)	—

PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY.

⚠ TU51	VTUVTST5UF770	J	Tuner	AZ
	or			
	VTUVTST5UF78S			
	or			
	VTUENV56D82-1			

	TU51	R57
COMBI-NATION	ENV56D82-1	56K ⁄ 1⁄8W
	VTST5UF78S	3.9K ⁄ 1⁄8W
	VTST5UF770	56K ⁄ 1⁄8W

INTEGRATED CIRCUITS

▲⚠ IC201	RH-iX3354CEZZ	J	LX3354CE	AT
IC351	VHiAN7511//-1	J	AN7511	AK
⚠ IC501	VHiLA7840//-1	J	LA7840	AR
⚠ IC701	VHiTEA1507/-1	J	TEA1507P/N1	AL
⚠ IC702	RH-FX0034CEZZ	J	PC817	AE
	or			
	RH-FX0002GEZZ			
	or			
	RH-FX0029CEZZ			

Ref. No.	Part No.	★	Description	Code

PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT (Continued)

⚠ IC771	VHiKA7805AP-1 or VHiTA7805S/-1	J	KIA7805API	AE
IC2001	RH-iX3492CEZZQ	J	IX3492CE	AU
IC2040	VHiPST994C/-1	J	PST994C	AD
IC2101	VHiBR24C02/-1 or VHiM24C02B/-1	J	I.C. (CN13M10B)	AL
IC2101	VHiM24C16B/-1 or VHiBR24C16/-1	J	M24C16-BN6 (13N-M100B/150B)	AG

TRANSISTORS

Q101	VS2SC945AQ/-1 or VS2SC3198-Y-1 or VS2SC1815Y/-1	J	2SC945AQ	AB
Q201	VS2SC2735//1E	J	2SC2735	AC
Q451	VS2SA1530R/-1	J	2SA1530R	AB
Q452	VS2SA1266-Y-1	J	2SA1266(Y)	AA
Q601	VS2SC2482//-1	J	2SC2482	AD
⚠ Q602	VS2SD2586//1E	J	2SD2586	AM
Q631	VS2SC945AQ/-1 or VS2SC3198-Y-1 or VS2SC1815Y/-1	J	2SC945AQ	AB
⚠ Q701	VS2SK2645++-1 or VS2SK2708//1E or VSSTP6NC60F-1	J	K2645++ (CN13M10B)	AN
⚠ Q701	VSSPP04N60C-1 or VSSPP07N60C-1 or VS2SK2708//1E or VS2SK2645++-1 or VSSTP6NC60+-1 or VSSTP6NC60F-1	J	SPP04N60 (13N-M100B/150B)	AH
⚠ Q702	VS2SC945AQ/-1 or VS2SC3198-Y-1 or VS2SC1815Y/-1	J	2SC945AQ	AB
Q751	VS2SC945AQ/-1 or VS2SC3198-Y-1 or VS2SC1815Y/-1	J	2SC945AQ	AB
Q752	VS2SC945AQ/-1 or VS2SC3198-Y-1 or VS2SC1815Y/-1	J	2SC945AQ	AB
Q2201	VS2SC3928R/-1 or VS2PD601AR/-1	J	2SC3928R	AB
Q2211	VS2SC3928R/-1	J	2SC3928R	AB

DIODES

D52	RH-EX0676GEZZ	J	Zener Diode, 32V	AA
D101	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
D352	RH-DX0475CEZZ or VHD1SS119//-1	J	Diode	AB
D353	RH-EX0644GEZZ	J	Zener Diode, 13V	AB
D453	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
D455	RH-DX0475CEZZ	J	Diode	AB
▲⚠ D502	RH-DX0131CEZZ	J	Diode	AC
D510	RH-EX0654CEZZ	J	Zener Diode, 75V	AD
D511	RH-DX0441CEZZ	J	Diode	AC
D610	RH-DX0131CEZZ	J	Diode	AC
D632	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA
D641	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA
▲⚠ D651	VHD1SS244//-1	J	Diode	AB
▲⚠ D653	RH-EX0667GEZZ	J	Zener Diode, 27V	AA
⚠ D661	RH-DX0468CEZZ or RH-DX0229CEZZ	J	Diode	AE
⚠ D701	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D702	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D703	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D704	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
D707	RH-DX0475CEZZ or VHD1SS244//-1	J	Diode	AB
D708	RH-DX0475CEZZ or VHD1SS244//-1	J	Diode	AB
⚠ D709	RH-DX0229CEZZ	J	Diode	AF
⚠ D712	RH-DX0487CEZZ or RH-DX0302CEZZ or RH-DX0468CEZZ or VHDD1NS4///-1 or RH-DX0513CEZZ	J	Diode	AC
▲⚠ D717	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
⚠ D725	RH-DX0131CEZZ	J	Diode	AC
D726	RH-DX0475CEZZ or VHD1SS119//-1	J	Diode	AB
D751	RH-EX0611GEZZ	J	Zener Diode, 5.1V	AA
D753	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC
⚠ D758	RH-DX0131CEZZ	J	Diode	AC
D2001	RH-DX0475CEZZ or VHD1SS119//-1	J	Diode	AB
⚠ VA701	RH-VX0048CEZZ or RH-VX0035CEZZ	J	Varistor (13N-M100B/150B)	AE

PACKAGED CIRCUITS

⚠ PR701	RMPTP0026CEZZ	J	Packaged Circuit	AF
X801	RCRSB0001PEZZ or RCRSB0205CEZZ	R	Crystal	AL

FILTERS

CF2040	RFiLA0099CEZZ or RFiLC0121GEZZ	J	Ceramic Filter	AE
SF201	RFiLC0441CEZZ	J	SAW Filter	AH

COILS

L201	VP-XF1R2K0000	J	Peaking 1.2µH	AB
L202	VP-XF1R2K0000	J	Peaking 1.2µH	AB
L203	VP-XF220K0000	J	Peaking 22µH	AB
L204	RCiLi0632CEZZ	J	IF Coil	AE

Ref. No.	Part No.	★	Description	Code

PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT (Continued)

L301	VP-XF150K0000	J	Peaking 15µH	AB
⚠ L701	RCiLF0078PEZZ	R	Coil	AF
	or			
	RCiLF0069PEZZ			
	or			
	RCiLF0037PEZZ			
	or			
	RCiLF0029PEZZ			
⚠ L702	RCiLF0090CEZZ	R	Coil (CN13M10B)	AL
⚠ L705	RCiLP0179CEZZ	J	Coil	AD
L2040	RCiLB0131CEZZ	J	Oscillation Coil	AE

TRANSFORMERS

⚠ T601	RTRNZ0731CEZZ	J	Transformer	AG
	or			
	RTRNZ0026PEZZ			
▲⚠ T602	RTRNF0212PEZZ	R	H-Volt Transformer	AY
⚠ T702	RTRNW0004PEZZ	R	Transformer	AL
	or			
	RTRNW0008PEZZ			

CONTROL

▲⚠ R738	RVR-M4628GEZZ	J	22k	AB
	or			
	RVR-M4336CEZZ			

CAPACITORS

[EL.··· Electrolytic, M-Poly.··· Metalized Polypro Film]

C51	VCEA0A1CW337M	J	330	16V	EL.	AC
C53	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C54	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C101	VCEA0A1CW476M	J	47	16V	EL.	AB
C201	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C202	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C203	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C204	VCQYTA1HM223K	J	0.022	50V	Mylar	AB
C205	VCKYPA1HB103K	J	0.01	50V	Ceramic	AA
C206	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C207	VCEA0A1CW476M	J	47	16V	EL.	AB
C208	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C209	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C210	VCEA0A1HW474M	J	0.47	50V	EL.	AB
C211	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C212	VCEA0A1HW474M	J	0.47	50V	EL.	AB
C220	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C301	VCCCCY1HH470J	J	47p	50V	Ceramic	AA
C302	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C304	VCCCCY1HH470J	J	47p	50V	Ceramic	AA
C305	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C306	VCQYTA1HM103K	J	0.01	50V	Mylar	AB
C354	VCEA0A1HW225M	J	2.2	50V	EL.	AB
C356	VCKYCY1HB332K	J	3300p	50V	Ceramic	AA
C357	VCEA0A1HW106M	J	10	50V	EL.	AB
C358	VCEA0A1HW106M	J	10	50V	EL.	AB
C361	VCEA0A1CW227M	J	220	16V	EL.	AC
C401	VCCCCY1HH470J	J	47p	50V	Ceramic	AA
C411	VCEA0A1AW108M	J	1000	10V	EL.	AC
C412	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C414	VCEA0A1HW225M	J	2.2	50V	EL.	AB
C416	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C418	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C421	VCEA0A1HW106M	J	10	50V	EL.	AB
C451	VCQYTA1HM563K	J	0.056	50V	Mylar	AB
C454	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C456	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C509	VCKYPA2HB102K	J	1000p	500V	Ceramic	AA
C510	VCEA0A1VW477M	J	470	35V	EL.	AB
C512	VCFYSA1JB224J	J	0.22	63V	Mylar	AD
C513	VCFYSA1JB473J	J	0.047	63V	Mylar	AC
C514	VCEA0A1EW477M	J	470	25V	EL.	AD
C515	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C516	VCKYCY1HB222K	J	2200p	50V	Ceramic	AA
C517	VCEA0A1CW226M	J	22	16V	EL.	AB
C520	VCEA0A1HW107M	J	100	50V	EL.	AB
C530	VCFYFA1HA334J	J	0.33	50V	Mylar	AB
C531	VCFYFA1HA564J	J	0.56	50V	Mylar	AB
C606	VCKYPA2HB561K	J	560p	500V	Ceramic	AA
C607	VCKYPA1HB472K	J	4700p	50V	Ceramic	AA
▲⚠ C610	VCFPVC3CA522H	J	5200p	1.6kV	M-Poly.	AD
C612	VCFPPB2EB334J	J	0.33	250V	M-Poly.	AF
C633	VCEA0A1AW337M	J	330	10V	EL.	AC
C634	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C635	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C636	VCQYTA1HM153K	J	0.015	50V	Mylar	AA
C637	VCEA0A1CW476M	J	47	16V	EL.	AB
C638	VCEA0A1AW477M	J	470	10V	EL.	AC
C652	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C653	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C661	VCKYPA2HB152K	J	1500p	500V	Ceramic	AA
C662	VCEA0A1CW477M	J	470	16V	EL.	AC
⚠ C701	RC-FZ035SCEZZ	J	0.047	AC250V	Plastic	AC
	or		(13N-M100B/150B)			
	RC-FZ004SGEZZ					
	or					
	RC-FZ015SCEZZ					
	or					
	RC-FZ027SCEZZ					
C702	RC-KZ0029CEZZ	J	0.01	AC250V	Ceramic	AC
C703	RC-KZ0029CEZZ	J	0.01	AC250V	Ceramic	AC
⚠ C705	RC-EZ1022CEZZ	J	470	200V	EL.	AK
⚠ C706	RC-KZ0092GEZZ	J	0.0033	AC250V	Ceramic	AC
	or					
	RC-KZ021SCEZZ					
	or					
	RC-KZ009SCEZZ					
	or					
	RC-KZ0106GEZZ					
	or					
	RC-KZ0156CEZZ					
⚠ C708	RC-FZ037SCEZZ	J	0.22	AC250V	Plastic	AD
	or		(CN13M10B)			
	RC-FZ012SGEZZ					
	or					
	RC-FZ017SCEZZ					
	or					
	RC-FZ029SCEZZ					
C717	VCKYPA2HB472K	J	4700p	500V	Ceramic	AB
⚠ C723	RC-EZ0638CEZZ	J	33	160V	EL.	AG
⚠ C725	RC-EZ0724CEZZ	J	100	160V	EL.	AG
C726	RC-KZ0338CEZZ	J	560p	2kV	Ceramic	AD
C727	VCKYPA2HB472K	J	4700p	500V	Ceramic	AB
⚠ C730	VCEA0A1CW108M	J	1000	16V	EL.	AD
⚠ C731	VCEA0A1EW107M	J	100	25V	EL.	AC
C732	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA
C735	VCCCPA1HH680J	J	68p	50V	Ceramic	AA
C737	VCEA0A1EW226M	J	22	25V	EL.	AB
C738	RC-KZ0340CEZZ	J	820p	2kV	Ceramic	AD
C739	VCEA0A1HW104M	J	0.1	50V	EL.	AB
C740	VCEA0A1EW476M	J	47	25V	EL.	AB
C743	RC-KZ0338CEZZ	J	560p	2kV	Ceramic	AD
C750	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA
C752	VCEA0A1CW476M	J	47	16V	EL.	AB
C753	RC-KZ0338CEZZ	J	560p	2kV	Ceramic	AD
			(13N-M100B/150B)			
C754	VCEA0A1CW476M	J	47	16V	EL.	AB
C758	VCEA0A2EW106M	J	10	250V	EL.	AD
C759	VCKYPA2HB102K	J	1000p	500V	Ceramic	AA
C760	VCEA0A1CW108M	J	1000	16V	EL.	AD
C771	VCEA0A1CW476M	J	47	16V	EL.	AB
C772	VCEA0A1CW476M	J	47	16V	EL.	AB
C783	VCQYTA1HM103K	J	0.01	50V	Mylar	AB
C801	VCCCCY1HH180J	J	18p	50V	Ceramic	AA
C807	VCKYCY1EF104Z	J	0.1	25V	Ceramic	AA
C808	VCEA0A1CW106M	J	10	16V	EL.	AB
C811	VCKYCY1CB473K	J	0.047	16V	Ceramic	AA
C812	VCEA0A1HW474M	J	0.47	50V	EL.	AB

PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT (Continued)

Ref. No.	Part No.	★				Description	Code
C901	VCEA0A1HW105M	J	1.0	50V		EL.	AB
C905	VCEA0A1HW106M	J	10	50V		EL.	AB
C2001	VCCCCY1HH101J	J	100p	50V		Ceramic	AA
C2002	VCCCCY1HH101J	J	100p	50V		Ceramic	AA
C2040	VCEA0A1AW107M	J	100	10V		EL.	AB
C2041	VCEA0A1HW105M	J	1.0	50V		EL.	AB
C2060	VCKYCY1CB104K	J	0.1	16V		Ceramic	AB
C2061	VCKYCY1HB222K	J	2200p	50V		Ceramic	AA
C2062	VCEA0A1AW107M	J	100	10V		EL.	AB
C2201	VCKYCY1HB682K	J	6800p	50V		Ceramic	AA
C2601	VCEA0A1HW475M	J	4.7	50V		EL.	AB
C2602	VCCCCY1HH101J	J	100p	50V		Ceramic	AA

RESISTORS

[M-Ox.··· Metal Oxide, M-Film··· Metal Film]

Ref. No.	Part No.	★				Description	Code
RJ2	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ7	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ8	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ9	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ10	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ12	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ18	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ19	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ20	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ21	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
RJ26	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
⚠ R53	VRS-VU3LE223J	J	22k	3W		M-Ox.	AC
R54	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R55	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R56	VRN-MD2AL823J	J	82k	1/10W		M-Film	AA
R57	VRD-RA2BE563J	J	56k	1/8W		Carbon	AA
	or						
	VRD-RA2BE392J						
R101	VRD-RA2BE152J	J	1.5k	1/8W		Carbon	AA
R201	VRN-MD2AL221J	J	220	1/10W		M-Film	AA
R202	VRN-MD2AL122J	J	1.2k	1/10W		M-Film	AA
R203	VRN-MD2AL682J	J	6.8k	1/10W		M-Film	AA
R204	VRN-MD2AL270J	J	27	1/10W		M-Film	AA
R205	VRD-RA2BE680J	J	68	1/8W		Carbon	AA
R206	VRD-RA2EE151J	J	150	1/4W		Carbon	AA
R207	VRD-RA2BE123J	J	12k	1/8W		Carbon	AA
R208	VRN-MD2AL332J	J	3.3k	1/10W		M-Film	AA
R209	VRN-MD2AL123J	J	12k	1/10W		M-Film	AA
R210	VRN-MD2AL104J	J	100k	1/10W		M-Film	AA
R211	VRN-MD2AL104J	J	100k	1/10W		M-Film	AA
R212	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
R215	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
R220	VRN-MD2AL331J	J	330	1/10W		M-Film	AA
R301	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R302	VRN-MD2AL332J	J	3.3k	1/10W		M-Film	AA
R353	VRD-RA2BE683J	J	68k	1/8W		Carbon	AA
R354	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA
R355	VRD-RA2BE223J	J	22k	1/8W		Carbon	AA
R357	VRN-MD2AL822J	J	8.2k	1/10W		M-Film	AA
R401	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R402	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R403	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R404	VRD-RA2BE102J	J	1.0k	1/8W		Carbon	AA
R411	VRN-MD2AL684J	J	680k	1/10W		M-Film	AA
R412	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R413	VRN-MD2AL152J	J	1.5k	1/10W		M-Film	AA
R414	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
R421	VRN-MD2AL223J	J	22k	1/10W		M-Film	AA
⚠ R451	VRS-SV2HC103J	J	10k	1/2W		M-Ox.	AA
R453	VRD-RA2BE152J	J	1.5k	1/8W		Carbon	AA
R454	VRD-RA2EE224J	J	220k	1/4W		Carbon	AA
R455	VRD-RA2BE392J	J	3.9k	1/8W		Carbon	AA
R456	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA
R457	VRD-RA2BE102J	J	1.0k	1/8W		Carbon	AA
R461	VRN-MD2AL184J	J	180k	1/10W		M-Film	AA
R462	VRN-MD2AL273J	J	27k	1/10W		M-Film	AA
R512	VRD-RM2HD102J	J	1.0k	1/2W		Carbon	AA
R513	VRD-RM2HD102J	J	1.0k	1/2W		Carbon	AA
R514	VRD-RM2HD1R0J	J	1.0	1/2W		Carbon	AA
R515	VRS-VU3AE391J	J	390	1W		M-Ox.	AB
R516	VRN-MD2AL153J	J	15k	1/10W		M-Film	AA
R517	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R518	VRN-MD2AL333J	J	33k	1/10W		M-Film	AA
R519	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA
R520	VRD-RM2HD1R2J	J	1.2	1/2W		Carbon	AA
R522	VRD-RA2BE102J	J	1.0k	1/8W		Carbon	AA
R523	VRD-RA2BE562J	J	5.6k	1/8W		Carbon	AA
R525	VRD-RA2BE272J	J	2.7k	1/8W		Carbon	AA
R527	VRD-RA2BE223J	J	22k	1/8W		Carbon	AA
R528	VRD-RA2BE272J	J	2.7k	1/8W		Carbon	AA
R529	VRD-RA2BE472J	J	4.7k	1/8W		Carbon	AA
⚠ R604	VRS-VU3LE562J	J	5.6k	3W		M-Ox.	AC
R605	VRD-RA2BE121J	J	120	1/8W		Carbon	AA
R606	VRD-RA2BE102J	J	1.0k	1/8W		Carbon	AA
⚠ R608	VRS-VU3DE391J	J	390	2W		M-Ox.	AB
⚠ R609	VRS-VU3AE562J	J	5.6k	1W		M-Ox.	AK
R610	VRD-RM2HD220J	J	22	1/2W		Carbon	AA
⚠ R611	VRS-KA3HG3R3K	J	3.3	5W		M-Ox.	AD
R622	VRN-MD2AL222J	J	2.2k	1/10W		M-Film	AA
R623	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA
R624	VRN-RA2BK472F	J	4.7k	1/8W		M-Film	AA
R634	VRD-RM2HD121J	J	120	1/2W		Carbon	AA
R635	VRN-MD2AL332J	J	3.3k	1/10W		M-Film	AA
R636	VRD-RA2EE221J	J	220	1/4W		Carbon	AA
⚠ R641	VRS-VU3AE682J	J	6.8k	1W		M-Ox.	AB
▲⚠ R651	VRD-RM2HD270J	J	27	1/2W		Carbon	AA
⚠ R653	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
▲⚠ R654	VRD-RA2BE154J	J	150k	1/8W		Carbon	AA
▲⚠ R655	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA
⚠ R659	VRN-VV3AB1R5J	J	1.5	1W		M-Film	AA
⚠ R661	VRN-VV3ABR47J	J	0.47	1W		M-Film	AA
▲⚠ R662	VRD-RA2BE102G	J	1.0k	1/8W		Carbon	AB
⚠ R702	RR-DZ0049CEZZ	J	3.9M	1/2W		Carbon	AB
	or						
	RR-HZ0048CEZZ						
⚠ R703	VRW-KP3HC1R8K	J	1.8	5W		Cement	AC
⚠ R705	VRN-VV3ABR47J	J	0.47	1W		M-Film	AA
⚠ R706	VRN-VV3ABR47J	J	0.47	1W		M-Film	AA
R707	VRD-RM2HD270J	J	27	1/2W		Carbon	AA
R708	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R710	VRS-SV2HC102J	J	1.0k	1/2W		M-Ox.	AA
R711	VRN-MD2AL334J	J	330k	1/10W		M-Film	AC
R712	VRD-RA2BE100J	J	10	1/8W		Carbon	AA
R713	VRS-SV2HC122J	J	1.2k	1/2W		M-Ox.	AA
R715	VRD-RA2BE150J	J	15	1/8W		Carbon	AA
R716	VRS-VU3AE121J	J	120	1W		M-Ox.	AB
R721	VRD-RM2HD124J	J	120k	1/2W		Carbon	AA
R723	VRN-MD2AL000J	J	0	1/10W		M-Film	AA
R725	VRS-SV2HC821J	J	820	1/2W		M-Ox.	AA
▲⚠ R733	VRD-RA2EE394J	J	390k	1/4W		Carbon	AA
▲⚠ R736	VRD-RM2HD184J	J	180k	1/2W		Carbon	AA
R739	VRD-RM2HD332J	J	3.3k	1/2W		Carbon	AA
R740	VRD-RM2HD470J	J	47	1/2W		Carbon	AA
▲⚠ R741	VRD-RM2HD682J	J	6.8k	1/2W		Carbon	AA
R751	VRD-RA2BE821J	J	820	1/8W		Carbon	AA
R752	VRD-RA2BE562J	J	5.6k	1/8W		Carbon	AA
R755	VRD-RM2HD151J	J	150	1/2W		Carbon	AA
⚠ R758	VRS-SV2HC150J	J	15	1/2W		M-Ox.	AA
⚠ R773	VRS-VU3LE270J	J	27	3W		M-Ox.	AC
⚠ R774	VRS-VU3LE680J	J	68	3W		M-Ox.	AC
R801	VRD-RM2HD470J	J	47	1/2W		Carbon	AA
R807	VRN-MD2AL272J	J	2.7k	1/10W		M-Film	AA
R808	VRN-MD2AL272J	J	2.7k	1/10W		M-Film	AA
R809	VRN-MD2AL223J	J	22k	1/10W		M-Film	AA
R810	VRN-MD2AL223J	J	22k	1/10W		M-Film	AA
R901	VRD-RA2BE101J	J	100	1/8W		Carbon	AB
R902	VRN-MD2AL750J	J	75	1/10W		M-Film	AA
R906	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R925	VRN-MD2AL104J	J	100k	1/10W		M-Film	AA
R961	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R962	VRN-MD2AL101J	J	100	1/10W		M-Film	AA
R2001	VRN-MD2AL102J	J	1.0k	1/10W		M-Film	AA
R2002	VRN-MD2AL103J	J	10k	1/10W		M-Film	AA

PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
R2006	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2008	VRN-MD2AL333J	J	33k 1/10W M-Film	AA
R2009	VRN-MD2AL102J	J	1.0k 1/10W M-Film	AA
R2010	VRN-MD2AL102J	J	1.0k 1/10W M-Film	AA
R2012	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2014	VRN-MD2AL103J	J	10k 1/10W M-Film (CN13M10B)	AA
R2016	VRN-MD2AL223J	J	22k 1/10W M-Film	AA
R2018	VRN-MD2AL103J	J	10k 1/10W M-Film (13N-M100B/150B)	AA
R2020	VRN-MD2AL223J	J	22k 1/10W M-Film	AA
R2022	VRN-MD2AL333J	J	33k 1/10W M-Film	AA
R2023	VRD-RA2BE223J	J	22k 1/8W Carbon	AA
R2024	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2025	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2026	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2027	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2028	VRN-MD2AL102J	J	1.0k 1/10W M-Film	AA
R2029	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2032	VRD-RA2BE471J	J	470 1/8W Carbon	AA
R2033	VRN-MD2AL684J	J	680k 1/10W M-Film	AA
R2034	VRN-MD2AL684J	J	680k 1/10W M-Film	AA
R2040	VRN-MD2AL102J	J	1.0k 1/10W M-Film	AA
R2041	VRN-MD2AL333J	J	33k 1/10W M-Film	AA
R2042	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R2043	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R2044	VRN-MD2AL683J	J	68k 1/10W M-Film	AA
R2045	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2047	VRN-MD2AL221J	J	220 1/10W M-Film	AA
R2048	VRN-MD2AL562J	J	5.6k 1/10W M-Film	AA
R2049	VRN-MD2AL333J	J	33k 1/10W M-Film	AA
R2060	VRN-MD2AL221J	J	220 1/10W M-Film	AA
R2061	VRN-MD2AL562J	J	5.6k 1/10W M-Film	AA
R2062	VRN-MD2AL183J	J	18k 1/10W M-Film	AA
R2063	VRN-MD2AL222J	J	2.2k 1/10W M-Film	AA
R2065	VRN-MD2AL000J	J	0 1/10W M-Film	AA
R2066	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2067	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2068	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2070	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2072	VRN-MD2AL103J	J	10k 1/10W M-Film	AA
R2101	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2102	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2201	VRD-RA2BE103J	J	10k 1/8W Carbon	AA
R2202	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
R2203	VRN-MD2AL332J	J	3.3k 1/10W M-Film	AA
R2211	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R2212	VRN-MD2AL682J	J	6.8k 1/10W M-Film	AA
R2213	VRD-RA2BE223J	J	22k 1/8W Carbon	AA
R2401	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2402	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2403	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2404	VRN-MD2AL101J	J	100 1/10W M-Film	AA
R2501	VRN-MD2AL123J	J	12k 1/10W M-Film	AA
R2503	VRN-MD2AL273J	J	27k 1/10W M-Film	AA
R2504	VRN-MD2AL123J	J	12k 1/10W M-Film	AA
R2505	VRN-MD2AL563J	J	56k 1/10W M-Film	AA
R2506	VRN-MD2AL563J	J	56k 1/10W M-Film	AA
R2507	VRN-MD2AL823J	J	82k 1/10W M-Film	AA
R2508	VRN-MD2AL153J	J	15k 1/10W M-Film	AA
R2509	VRN-MD2AL272J	J	2.7k 1/10W M-Film	AA
R2601	VRD-RA2BE331J	J	330 1/8W Carbon	AA

SWITCHES

S2501	QSW-K0202PEZZ or QSW-K0079GEZZ	R	Power	AC
S2502	QSW-K0202PEZZ or QSW-K0079GEZZ	R	VOL-Down	AC
S2503	QSW-K0202PEZZ	R	VOL-Up	AC
S2504	QSW-K0202PEZZ or QSW-K0079GEZZ	R	CH-Down	AC
S2505	QSW-K0202PEZZ or QSW-K0079GEZZ	R	CH-Up	AC

MISCELLANEOUS PARTS

⚠ F701	QFS-B4023CEZZ or QFS-B4021GEZZ	J	Fuse 4A (125V)	AC
FH701	QFSHD1013CEZZ	J	Fuse Holder	AC
FH702	QFSHD1014CEZZ	J	Fuse Holder	AC
FB351	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB601	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB2002	RBLN-0037CEZZ	J	Ferrite Bead	AB
J903	QJAKE0205CE09 or QJAKE0159CEZZ	J	Jack, Audio IN	AD
J905	QJAKE0205CE04 or QJAKE0158CEZZ	J	Jack, Video IN	AD
P302	QPLGN0261CEZZ	J	Plug, 2-pin (S)	AB
P401	QPLGN0561CEZZ	J	Plug, 5-pin (GBN)	AB
P601	QPLGN0660CEZZ	J	Plug, 6-pin (K)	AC
P651	QPLGN0361CEZZ	J	Plug, 3-pin (TP651-3)	AB
P701	QPLGN0260CEZZ	J	Plug, 2-pin (M)	AC
P751	QPLGN0461CEZZ	J	Plug, 4-pin (YBN)	AB
P2001	QPLGN0561CEZZ	J	Plug, 5-pin (TP2001-5)	AB
RMC2601	RRMCU0232CEZZ or RRMCU0252CEZZ	J	R/C Receiver	AG
RDA501	PRDAR0297PEFW	R	Heat Sink, for IC501	AD
RDA701	PRDAR0026PEFW	R	Heat Sink, for Q701	AD
	LX-BZ3100CEFD	J	Screw	AA

Ref. No.	Part No.	★	Description	Code

PWB-B: DUNTKA359WEV0 (13N-M100B/150B)
PWB-B: DUNTKA359WEV3 (CN13M10B)
CRT UNIT

TRANSISTORS

Q852	VSBF422////-1 or VS2SC2229O/1E	J	BF422	AC
Q854	VSBF422////-1 or VS2SC2229O/1E	J	BF422	AC
Q856	VSBF422////-1 or VS2SC2229O/1E	J	BF422	AC
Q881	VS2SA1266-Y-1 or VS2SA1015-Y-1	J	A1266(Y)	AA

DIODES

D882	RH-DX0475CEZZ	J	Diode	AB
D885	RH-DX0475CEZZ	J	Diode	AB

COIL

L852	VP-MK820K0000	J	Peaking 82µH	AB

CAPACITORS

[EL.··· Electrolytic]

C851	VCCCCY1HH151J	J	150p	50V	Ceramic	AA
C852	VCCCCY1HH151J	J	150p	50V	Ceramic	AA
C853	VCCSPA1HL151J	J	150p	50V	Ceramic	AA
C854	RC-KZ0029CEZZ or RC-KZ0160GEZZ	J	0.01	250V	Ceramic	AC
C881	VCEA0A1CW106M	J	10	16V	EL.	AB
C883	VCEA0A1CW336M	J	33	16V	EL.	AB

RESISTORS

[M-Ox.··· Metal Oxide, M-Film··· Metal Film]

R852	VRD-RA2BE221J	J	220	1/8W	Carbon	AA
R853	VRN-MD2AL121J	J	120	1/10W	M-Film	AA
⚠ R857	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R858	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R860	VRD-RA2BE221J	J	220	1/8W	Carbon	AA
R861	VRN-MD2AL121J	J	120	1/10W	M-Film	AA
⚠ R865	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R866	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R867	VRN-MD2AL470J	J	47	1/10W	M-Film	AA
R868	VRN-MD2AL221J	J	220	1/10W	M-Film	AA
R869	VRN-MD2AL121J	J	120	1/10W	M-Film	AA
⚠ R873	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R874	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R881	VRN-MD2AL561J	J	560	1/10W	M-Film	AA
R882	VRN-MD2AL391J	J	390	1/10W	M-Film	AA
R883	VRD-RA2BE561J	J	560	1/8W	Carbon	AA
R884	VRN-MD2AL152J	J	1.5k	1/10W	M-Film	AA
R886	VRN-MD2AL821J	J	820	1/10W	M-Film	AA
R887	VRD-RA2BE470J	J	47	1/8W	Carbon	AA
R890	VRN-MD2AL470J	J	47	1/10W	M-Film	AA
R891	VRN-MD2AL470J	J	47	1/10W	M-Film	AA

MISCELLANEOUS PARTS

P851	QPLGN0561CEZZ	J	Plug, 5-pin (GBN)	AB
P852	QPLGN0461CEZZ	J	Plug, 4-pin (YBN)	AB
SC852	QSOCV0839CEZZ or QSOCV0842CEZZ	J	CRT Socket	AK

Ref. No.	Part No.	★	Description	Code

MISCELLANEOUS PARTS

⚠ ACC701	QACCD3090CESA or QACCD3064CESA or QACCD3060CESA	J	AC Cord (13N-M100B, CN13M10B)	AK
⚠ ACC701	QACCD3060CESB	J	AC Cord (13N-M150B)	AR
SP1	VSP0080PBP8YA or VSP0080PBQ3YA	R	Speaker, 32ohm	AK
	QCNW-2105PEZZ	R	Connecting Cord	AF
	QCNW-2106PEZZ	R	Connecting Cord	AE
	QCNW-2107PEZZ	R	Connecting Cord	AE

SUPPLIED ACCESSORIES

RRMCG1324CESA	J	Infrared R/C Unit (13N-M100B, CN13M10B)	AT
RRMCG1324CESB	J	Infrared R/C Unit (13N-M150B)	AT
TiNS-7209PEZZ	R	Operation Manual (13N-M100B/150B)	AE
TiNS-7238PEZZ	R	Operation Manual (CN13M10B)	

Ref. No.	Part No.	★	Description	Code

PACKING PARTS
(NOT REPLACEMENT ITEM)

	SPAKC6619PEZZ	–	Packing Case (13N-M100B)	—
	SPAKC6620PEZZ	–	Packing Case (13N-M150B)	—
	SPAKC6633PEZZ	–	Packing Case (CN13M10B)	—
	SPAKP0031PEZZ	–	Wrapping Paper	—
	SPAKP0110PEZZ	–	Wrapping Paper	—
	SPAKX2630PEZZ	–	Buffer Material	—
	SSAKA0001PEZZ	–	Polyethylene Bag	—

CABINET PARTS

1	CCABA2552WEV0	R	Front Cabinet Ass'y (13N-M100B)	AX
1	CCABA2552WEV2	R	Front Cabinet Ass'y (13N-M150B)	AX
1	CCABA2566WEV0	R	Front Cabinet Ass'y (CN13M10B)	AZ
1-1	*Not Available*	–	Front Cabinet	—
1-2	GCOVA0078PEKA	R	R/C Cover	AD
1-3	JBTN-0306PESA	R	Button (13N-M100B, CN13M10B)	AD
1-3	JBTN-0306PESB	R	Button (13N-M150B)	AD
2	CCABB2309WEV0	R	Rear Cabinet (13N-M100B)	AW
2	CCABB2309WEV1	R	Rear Cabinet (13N-M150B)	AW
2	CCABB2325WEV0	R	Rear Cabinet (CN13M10B)	AW

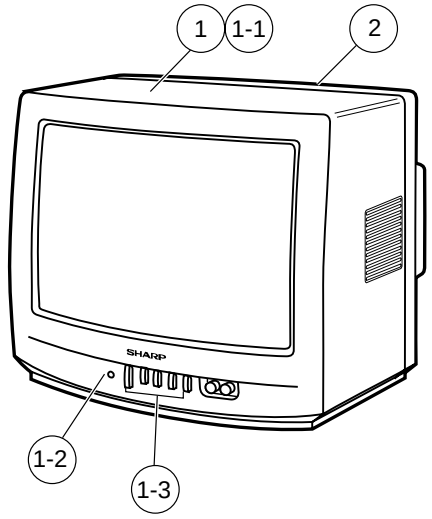

PACKING OF THE SET

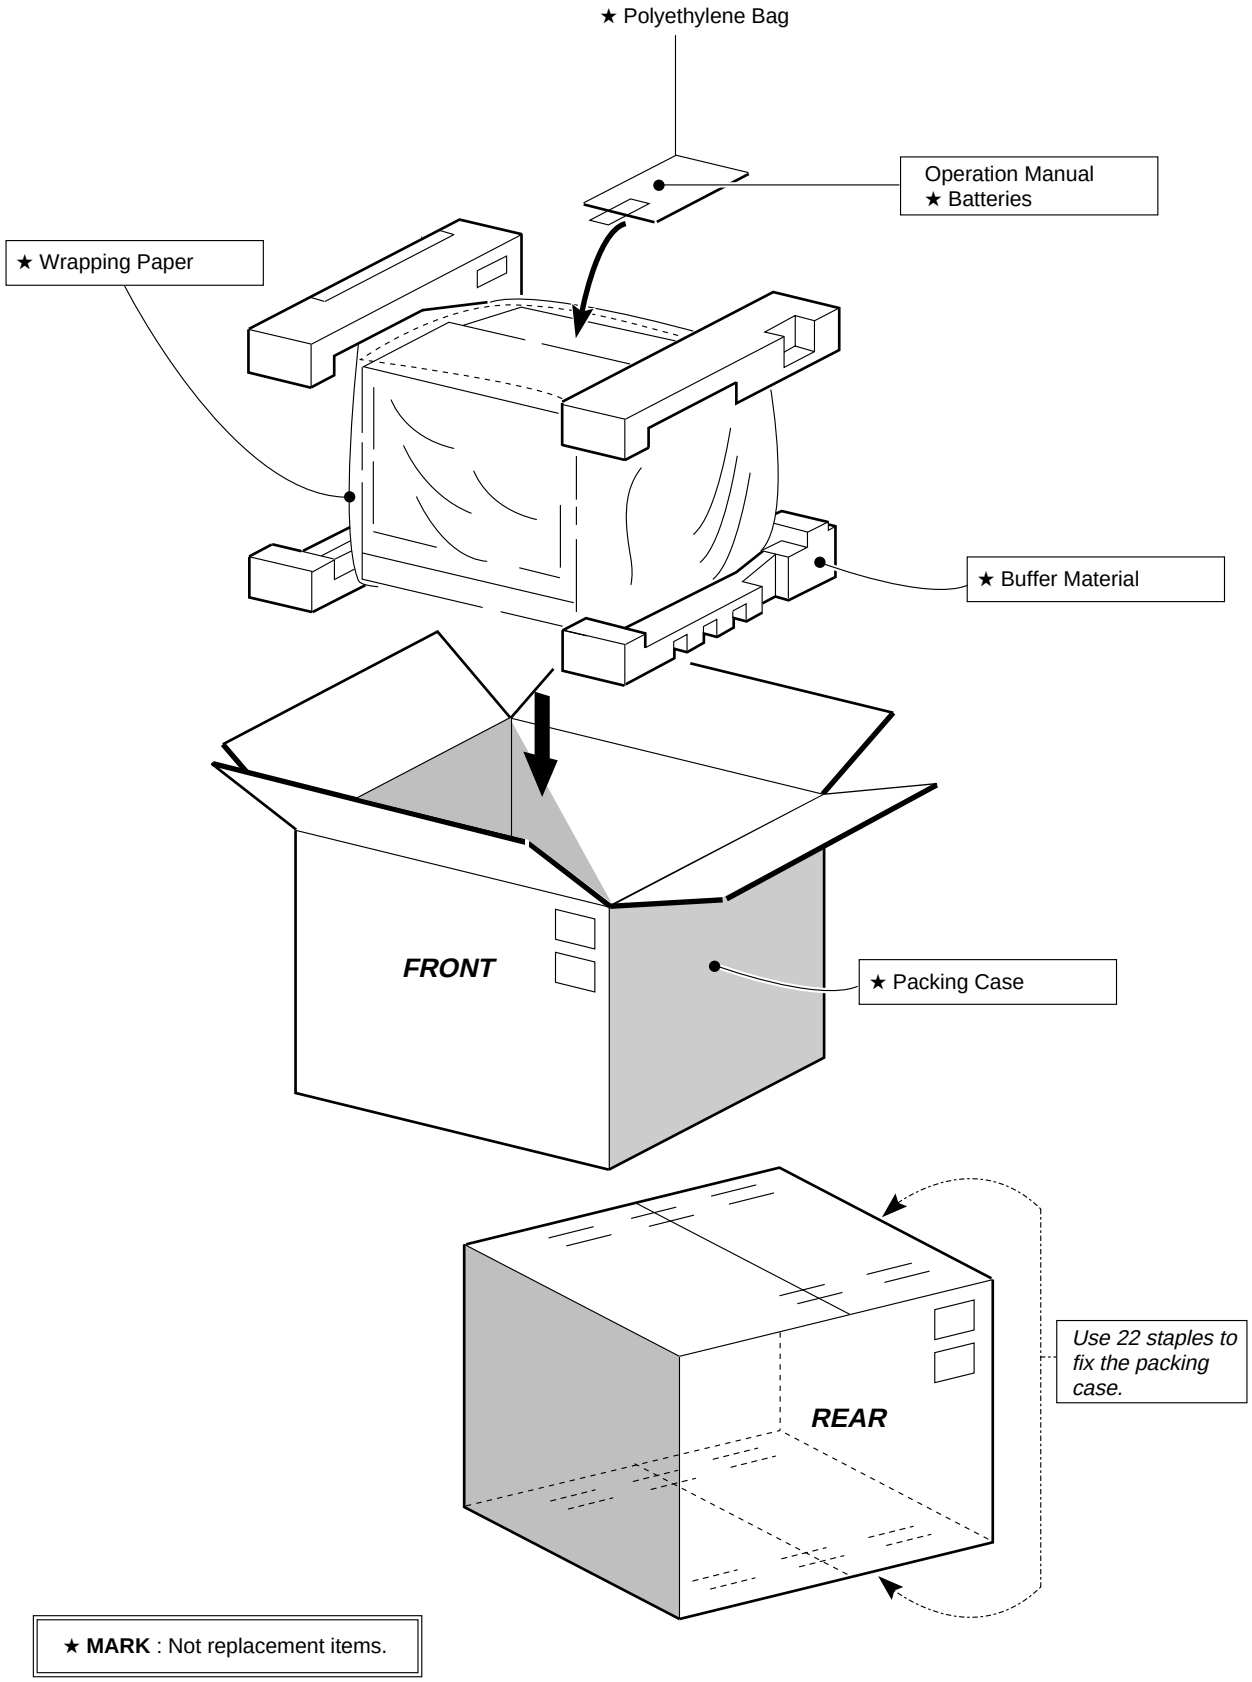

★ **MARK** : Not replacement items.

SHARP

COPYRIGHT © 2000 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

ⒹSEM (13N-M150B)
ⒹJAPAN ⓅSREC TQ1017-S
Nov. 2000 Printed in Japan
MI. KG

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages